



Defrost/Defog Windshield

Using The Heating/Ventilation System To Defrost Or Defog The Windshield:



To Remove Interior Fog On The Windshield:

- Set the airflow control to the defrost (☐) position. (The A/C will turn on automatically and "Fresh" mode will be activated).
- Set the temperature control to the desired position.
- Set the fan speed control to "3" or "4".

To Remove Frost Or Exterior Fog On The Windshield:

- Set the airflow control to the defrost (☐) position. (The A/C will turn on automatically and "Fresh" mode will be activated.)
- Set the temperature control to warm.
- Set the fan speed control to position "3" or "4".



Tire Inflation

Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label located on the driver's door opening for correct pressure.



Defrost/Defog Windshield (if installed)




The front window deicer is turned on by pushing the switch. The deicer is useful for melting the ice around the windshield wipers.

- To turn the deicer off, push the switch a second time.
- The deicer automatically turns itself off after several minutes.



Fuel Cap

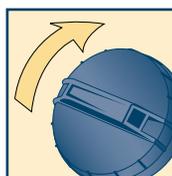

After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least 3 times. Failure to do this may result in the "Check Engine Light" illuminating.

Maintenance

		Normal Usage	Severe Usage
Engine oil and filter	Replace	7.5K	Replace 3K
Air cleaner filter	Replace	30K	Replace More frequently
Timing belt (when replacing timing belt, inspect water pump on 2.7L)	Inspect Replace	30K 60K	Inspect Replace 20K 40K
Manual transaxle oil	Inspect	15K *30K	Replace 60K
Automatic transaxle fluid and filter	Inspect Replace	30K 105K	Inspect Replace 60K
Rear brake drums/linings, parking brake	Inspect	15K *30K	Inspect More frequently
Brake pads, calipers and rotors	Inspect	15K	Inspect More frequently
Driveshafts and boots	Inspect	15K	Inspect 7.5K
Transfer case oil (4WD)	Inspect Replace	25K 62K	Replace 25K
Rear axle oil (4WD)	Inspect	25K	Replace 50K
Fuel lines, fuel hoses and connections	Inspect	30K	
Fuel vapor hoses and fuel filler cap	Inspect	30K	
"Drive belt 2.0 DOHC (alt, water pump) 2.7 V6 (alt, p/str'g, a/c)"	Inspect Inspect	7.5K 30K	
Coolant	Replace	30K	
Brake fluid	Inspect	15K *30K	
Brake hoses and lines	Inspect	30K	
Power steering pump, belt and hoses	Inspect	15K *30K	

*Every 30,000K thereafter
All units are displayed in miles.

For additional service intervals, severe maintenance schedule, and complete details, see Owner's Manual.




HYUNDAI ROADSIDE BENEFITS INCLUDE*:

- Towing to the nearest Hyundai Dealership or authorized Service Facility if your vehicle is inoperable, including non-warrantable related tows such as accidents. Coverage period is 60 months/unlimited miles.
- Emergency Roadside Assistance.
- National Dealer Locator Service.
- Trip Interruption Benefit if Warrantable Mechanical Disablement occurs more than 150 miles from home. Limit to \$100/day, 3 day maximum. (800) 243-7766

*Please refer to your Owner's Manual for specific coverage and limitations.

Right Front Seatback Table

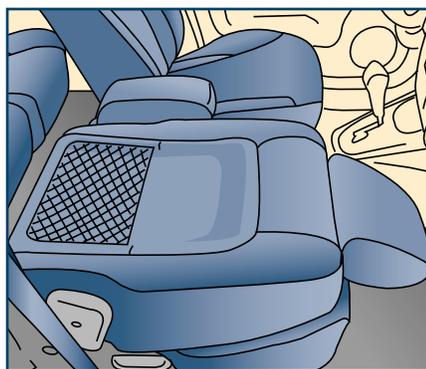

Seatback table operation:

1. Lower the headrest.
2. Pull the recliner control lever & push the seatback forward.

Note: Do not use the seatback table while driving.

Basic Safety Precautions

- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
- Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

Detailed Information

- This Quick Reference Guide does not replace your vehicle's Owner's Manual.
- If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

2005 Quick Reference Guide

TUCSON

HYUNDAI



1. Tailgate Open Warning Light

- Will illuminate if tailgate or tailgate window is open

2. Electronic Stability Program (ESP) Indicator Light

- Will illuminate for 6 seconds after key is turned on
- If light remains illuminated, take your car to your Hyundai Dealer

3. Supplemental Restraint System (AirBag) Service Reminder Indicator (SRI)


- Will illuminate for 6 seconds after key is turned on
- If light remains illuminated, take your car to your Hyundai Dealer

4. Malfunction Indicator Light (MIL)

- If light remains illuminated while driving, schedule an appointment with your Hyundai dealer

5. Trip Computer Button (If installed)

- Pressing the Trip Computer Button will cycle display as follows:

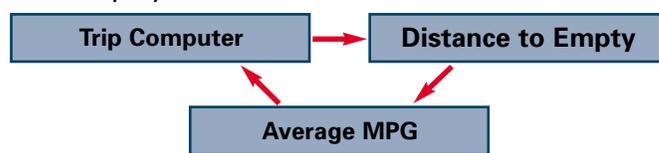


6. 4WD Lock Indicator Light (If installed)

- Illuminated when the 4WD system is active


7. 4WD System Warning Light (If installed)

- If this light blinks while driving, schedule an appointment with your Hyundai dealer

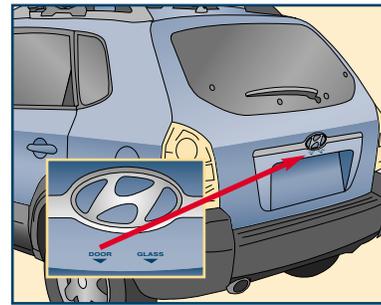

Tailgate open:

1. Pull and raise the "DOOR" release lever (left side) to open the tailgate.

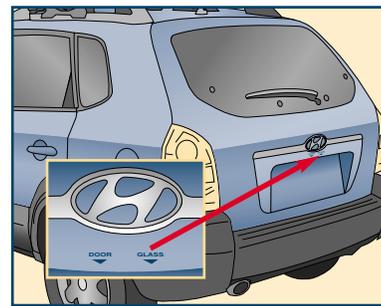


Tailgate window open:


1. Pull the "GLASS" release lever (right side).
2. Raise the window open handle.

Note: The hatch must be unlocked to open the tailgate or window.

The audio antenna is movable. For optimal reception, always make sure that your antenna is in the upright position.

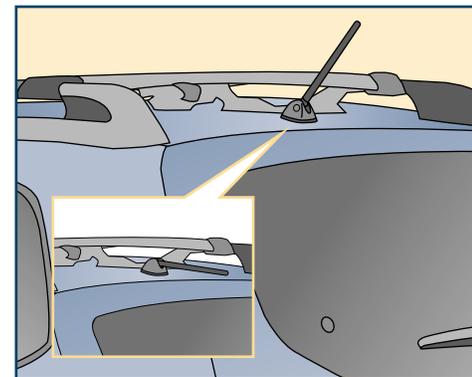


Note: The antenna mast may be laid down flat when carrying over-size objects such as skis or surfboards.

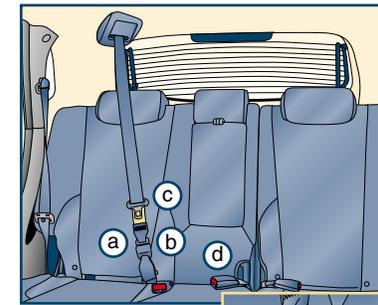

Rear Center Seatbelt:

1. Confirm that the metal tab (a) and buckle (b) are latched together.
2. Pull the seat belt out of the retractor and insert the metal tab (c) into the buckle (d).

To stow shoulder belt, insert key into slot to release metal tab (a).

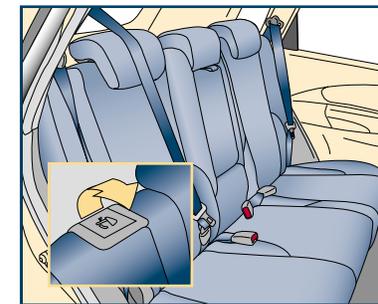



Rear Seat Recline

To recline or fold the rear seats, pull the seatback-folding lever.




- The 4WD system assists when driving on wet pavement, snow-covered roads, and/or offroad conditions.
- Press the 4WD lock switch for full time 4WD engagement.
- The 4WD indicator light will illuminate when the system is active.

Note: Do not drive the 4WD Tucson in 4WD Lock mode on dry pavement.

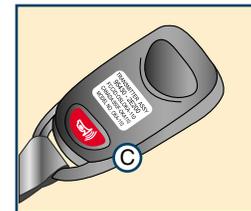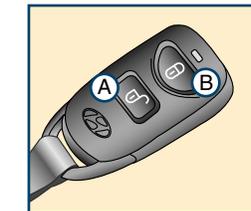

- A. Press **UNLOCK** on the transmitter to disarm the alarm and unlock the driver's door. Press **UNLOCK** again within 4 seconds to unlock all the doors.
- B. Press **LOCK** on the transmitter to lock all the doors and arm the alarm. Press **LOCK** again within 4 seconds to hear a confirmation chirp.
- C. Press **PANIC** on the transmitter to activate the horn and flashing lights for 30 seconds. Press **PANIC** again to turn off the horn and flashing lights.

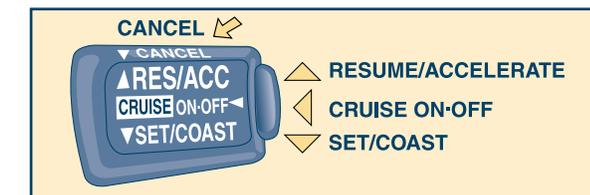

"PASSENGER AIR BAG OFF" Indicator:

- Will be illuminated when you turn ignition key to START or RUN.
- The light will not be illuminated when the passenger's airbag is enabled.

The occupant classification system will disable the right front passenger's air bags under certain conditions (light on). Refer to Owners' Manual for a complete description of this system.

Note: The driver's air bag and the side impact air bag are not part of the occupant classification system.