



WARRANTY INFORMATION:

Download a FREE electronic copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of owner.ford.com. (United States)

For Canada, visit ford.ca/warranty.

FOR LIMO/LIVERY/ HEARSE VEHICLES:

View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, fleet.ford.com/limo. (United States only)



DECEMBER 2018 SECOND PRINTING LITHO IN U.S.A.

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

United States

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: **1-800-232-5952**)
owner.ford.com

 [@FordService](https://twitter.com/FordService)

Canada

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
(TDD for the hearing impaired: **1-888-658-6805**)
ford.ca

 [@FordServiceCA](https://twitter.com/FordServiceCA)

KJ5J19G217 AA



2019 **Escape**

Quick Reference Guide



Commonly Used Voice Commands

Press the voice button  on the steering wheel and then say:



Global

- Cancel
- Help
- Main Menu
- List of Commands¹

Audio

- Sirius Channel <channel number> ²
- AM <frequency number>
- FM <frequency number>
- *Bluetooth* Audio
- USB

Navigation ^{1,3}

- Find an Address
- Find a ____
- Find a POI
- Find an Intersection
- Find the Nearest ____
- Show Previous Destinations
- Drive Home
- Cancel Route
- Show Route
- Where Am I?

Phone

- Pair Phone
- Call <contact name>
- Call <contact name> at <location>
- Dial <number>
- Delete
- Clear

SiriusXM[®] Traffic and Travel Link ^{1,2}

- Show Traffic
- Show Weather Map
- Show Fuel Prices
- Show 5-Day Forecast

Apps

- Mobile Apps
- List Mobile Apps
- Find Mobile Apps
- <App Name>

¹ available only with SYNC

² SiriusXM may not be available in all markets. Activation and a subscription are required.

³ if equipped

Table of Contents

Instrument Panel	4 – 5
SYNC	6 – 7
SYNC 3	8 – 10
Convenience	11
Comfort	12 – 13
Liftgate	14 – 15
Function	16 – 21
Essential Information	22 – 23

Learn More About Your New Vehicle

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



owner.ford.com (U.S.)



ford.ca (Canada)

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Some services may not be available in your area. Refer to the *SYNC 3* chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information.

For U.S. customers: Visit owner.ford.com or call 1-800-392-3673.

For Canadian customers: Visit syncmyride.ca or syncmaroute.ca or call 1-800-565-3673.

Instrument Panel



1 Cruise Control

To Set Your Cruise Control Speed

1. Press and release ON.
2. Drive to your preferred speed.
3. Press and release SET + or SET -, then take your foot off the accelerator.
4. After you set a speed, you can press SET + or SET - to adjust the cruise speed.

To cancel the set speed, press and release CAN or tap the brake pedal. To switch off, press OFF or switch the ignition off.

2 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or is flashing after you start the engine, the On-Board Diagnostics system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

3 Information Display

Provides information about various systems on your vehicle. Use the steering wheel controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter of your *Owner's Manual* for more information.

4 Wiper Controls

Use the rotary control on the lever to adjust the wipe intervals. Pull the lever toward you to wash the windshield.

5 Steering Wheel Controls*

VOL + or VOL- Press to increase or to decrease volume levels.

⏮ ⏭ Press to access the previous or next media selection.

🗣 Press to access voice recognition.

📞 Press to end a phone call.

📞 Press to access phone mode or to answer a phone call.

6 Adjustable Steering Column

Unlock the steering wheel by pulling the lever down. Adjust the wheel to the desired position (in, out, up and down). Push the lever back up to lock the steering wheel in place.

7 Keyless Starting*

You can start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again, without applying the brake, to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine shuts down automatically. Before this happens, a message appears in the information display, allowing you time to override the shutdown feature. If you try to leave the vehicle when it is still on, the horn will sound twice.

Note: A valid key must be inside the vehicle for the ignition to start.

8 Auto-Start-Stop*

For more information about Auto-Start-Stop, please see page 22.

*if equipped



SYNC is an in-vehicle communications system that works with your Bluetooth wireless technology-enabled phone and portable media player.

Using Voice Recognition

You can control many features using voice commands. This allows you to keep your hands on the wheel and focus on what is around you. To begin a voice session, press the voice button . A list of available voice commands appears in the display. You can also find additional voice commands in the SYNC chapter of your *Owner's Manual* or in the *Commonly Used Voice Commands* in this guide.

Helpful Hints for Using Voice Recognition

- Make sure the interior of your vehicle is as quiet as possible. Wind noise from open windows and road vibrations may prevent the system from correctly recognizing spoken commands.
- Before giving a voice command, wait for the system announcement to finish, followed by a single tone. Any command spoken before this does not register with the system.
- Speak naturally, without long pauses between words.
- You can interrupt the system at any time while it is speaking by pressing the voice button . You can cancel a voice session by pressing and holding the voice button .

The system provides feedback through audible tones, prompts, questions and spoken confirmations depending on the situation and the chosen level of interaction. You can customize the voice recognition system to provide more or less instruction and feedback. Please see the SYNC chapter of your *Owner's Manual*.

SYNC Owner Account

A SYNC owner account is essential for keeping up with the latest software downloads available for SYNC. It also provides you with access to customer support for any questions you may have.

To create a SYNC owner account, visit the website:

owner.ford.com (United States)

syncmyride.ca
syncmaroute.ca (Canada)

Support

The SYNC support team is available to help you with any questions you cannot answer on your own.

In the United States, call 1-800-392-3673.

In Canada, call 1-800-565-3673.

Pairing a Phone for the First Time

Wireless pairing of your phone with SYNC allows you to make and receive hands-free calls. Make sure to switch on the ignition and the radio. Shift the transmission into park (P) for automatic transmission or first gear for manual transmission.

1. Make sure to switch on your phone's Bluetooth feature before starting the search. See your device's manual if necessary.
2. Press the phone button. When the audio display indicates there is no paired phone, select the option to add.
3. When a message to begin pairing appears in the audio display, search for your vehicle as it displays on your phone to start the pairing process.
4. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your phone. If you are prompted to enter a PIN on your device, enter the PIN displayed on the screen. Your phone is now paired and the display indicates that the pairing was successful.
5. Depending on your phone's capability and your market, the system may prompt you with questions, such as setting the current phone as the primary phone (the phone SYNC automatically tries to connect with first upon vehicle start-up) and downloading your phone book.

To pair subsequent phones, please see the SYNC chapter of your *Owner's Manual*.



Using Your Connected Phone

You can use voice commands to make, receive, accept and reject phone calls. Text messages can also be sent and received through the SYNC system. Please refer to the SYNC chapter in your *Owner's Manual* for more information about using your connected phone with the SYNC system, including voice commands and screen selections.

Apps

AppLink enables voice and steering wheel control of certain smartphone apps. Once an app is running through AppLink, you can control the main features of the app through voice commands and steering wheel controls.

Note: You must pair and connect your smartphone to SYNC to access AppLink.

Using SYNC with your Media Player

You can access and play music from your digital music player over your vehicle's speaker system using the system's media menu or voice commands. You can also sort and play your music by specific categories, such as artist and album. Please reference the SYNC chapter of your *Owner's Manual* for information on how to connect your device through USB or Bluetooth.

SYNC 3®*



The SYNC 3 system allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your *Bluetooth* wireless technology-enabled phone, the touchscreen provides easy integration with many of your vehicle's features.

Using The Touchscreen

To operate the touchscreen, you can simply touch the item or option that you want to select. The button changes color when you select it. The touchscreen allows you quick access to all of your comfort, navigation, communication and audio options. Using the status and feature bar, you can quickly select the feature you want to use.

SYNC Owner Account and Updating Your System

A SYNC owner account is essential for keeping up with the latest software downloads available for SYNC, provides you access to customer support for questions you may have and allows you to maintain your account permissions.

To create a SYNC owner account, visit the website:

owner.ford.com (United States)

syncmyride.ca or syncmaroute.ca (Canada)

Once you have your SYNC owner account, you can log in to visit the SYNC software update page to update SYNC using a USB. You can also update your SYNC system over Wi-Fi. For information on how to update your system, please see the *SYNC 3* chapter in your *Owner's Manual*.

Home Screen

You can reach the Home screen by pressing the  button on the main screens. The Home screen displays features such as audio, phone and settings.

Using Voice Recognition

Using voice commands allows you to keep your hands on the wheel and focus on what is in front of you. To activate the SYNC 3 voice commands, press the voice button  on the steering wheel and wait for the prompt. You can find the available voice commands in the *SYNC 3* chapter of your *Owner's Manual* or in the *Commonly Used Voice Commands* in this guide.

Pairing Your Phone for the First Time

Pair your *Bluetooth* wireless technology-enabled phone with SYNC before using the functions in hands-free mode. Switch on *Bluetooth* on your device to begin pairing. See your phone's manual if necessary.

To add a phone:

1. Select **Add a Bluetooth Device**.
2. Follow the on-screen instructions.

3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle's make and model as it displays on your phone.
5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.

To pair subsequent phones, please see the *SYNC 3* chapter in your *Owner's Manual*.

Using your Connected Phone

You can use voice commands to make, receive, accept and reject phone calls. Text messages can also be sent and received through the system. Please refer to the *SYNC 3* chapter in your *Owner's Manual* for more information about using your connected phone with the system, including voice commands and screen selections.

Smartphone Connectivity

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone.

When you use Apple CarPlay or Android Auto, you can:

- Use your phone's voice assistant.
- Send and receive messages.
- Listen to music.
- Make calls.

Apple CarPlay and Android Auto disable some SYNC 3 features. Most Apple CarPlay and Android Auto features use mobile data.

FordPass™ Connect

With a FordPass™ Connect-equipped vehicle, you can use FordPass™ to track your vehicle's location and remotely access vehicle features such as start, lock and unlock and vehicle status, including fuel level and approximate mileage. You can also schedule specific times to remotely start your vehicle so it's ready to hit the road as soon as you are. Your vehicle is capable of providing a Wi-Fi hotspot if you have a vehicle hotspot data plan. FordPass™ Connect is an optional feature on select vehicles. FordPass™ is available through a free download via the Apple App Store® or Google Play™. Message and data rates may apply. Services may be limited by mobile phone network coverage area.

SYNC 3®*

Audio



You can select from a variety of entertainment options including AM/FM radio, USB, *Bluetooth* Stereo and Apps.

Presets

To set a new preset, tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station and then returns. There are two preset banks available for AM, three banks for FM and three banks for SiriusXM*. To access additional presets, tap the preset button.

Navigation



Your navigation system is comprised of two modes. Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available). 2D city maps show detailed outlines of buildings, visible land use and landscape features. **Destination** allows you to set a destination through search, previous destinations or preset home, work and favorite destinations.

Select **Destination** on the screen, then select **Search**. You can search for a destination using a street address, partial address, city, point of interest, intersection or latitude and longitude. Once you have chosen your destination, press **Start**. The system uses a variety of screens and prompts to guide you to your destination.


Settings

Under the Settings menu, you can access and adjust the settings for many of the system features. To access additional settings, swipe the screen left or right.

Apps

AppLink enables voice, steering wheel and touchscreen control of certain smartphone apps. Once an app is running through AppLink, you can control the main features of the app through voice commands and steering wheel controls.

Convenience

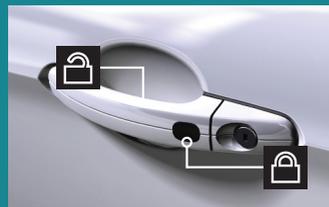

Intelligent Access*

You can unlock and lock the vehicle without taking the key out of your pocket or purse when your intelligent access key is within 3 feet (1 meter) of your vehicle. To unlock, touch the unlock sensor on the back of the front door handle for a brief period and then pull on the door handle, being careful to not touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the front door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.



Remote Entry Icons

- Press once to lock all of the doors. Press it again within a few seconds to confirm all doors are locked.
- Press once to unlock the driver door. Press again within a few seconds to unlock all of the doors.
- Press to switch on the panic alarm. To switch it off, press again or switch on the ignition.
- Press twice within a few seconds to open the liftgate.
- **Car finder:** Press twice within a few seconds to locate your vehicle. The horn sounds and the direction indicators flash.



Universal Garage Door Opener*

Your driver visor has a built-in wireless transmitter that replaces the common hand-held garage door opener.

You can program this system to security systems, entry gates and home or office lighting. Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual* for programming instructions and additional information on how to use this device.

Comfort

Ambient Lighting*

To access and adjust:

1. Press the **Settings** icon then **Ambient Lighting**.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

Rear Seats

With the seat occupied, pull the lever up to recline the seatback to the desired position. With the seat unoccupied, pull the lever up to fold the seatback forward. You may need to fold the outboard head restraints and lower the center head restraint first.

Dual Automatic Temperature Control

You and your front passenger can adjust independent controls to set the air temperature on each side of the vehicle. To return to one temperature, press and hold the AUTO button for more than two seconds. The passenger setting then switches to the driver set temperature.

Heated Front Seats*



The front heated seat controls are on the center stack. Adjust the control to your desired heat setting.

Remote Start*

Remote start allows you to start the engine from outside your vehicle using your key.

To start, press and then press twice within three seconds. Before driving your vehicle, you must press the push button ignition switch on the instrument panel while applying the brake pedal. You can also turn your vehicle off from outside after a remote start by pressing once.




Moonroof and Sunscreen*

The moonroof controls are on the overhead console and have a one-touch open and close feature. To stop its movement during one-touch operation, press the control a second time.

- Press and release the rear of the control to open the moonroof. The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the control again. Press and release the front of the control to close the moonroof. The sunscreen automatically opens with the moonroof.
- Press and release the rear of the control to open the sunscreen. Press and release the front of the control to close the sunscreen.

Memory Function*

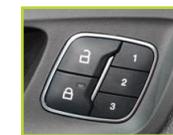

The memory function allows a one-touch recall of personalized memory features including the driver seat and power mirrors. Use the memory controls on the driver door to program and then recall memory positions. To program a position, switch

the ignition on. Adjust the memory features to your desired positions. Press and hold the desired preset button until you hear a single tone. You can now use these controls to recall the set memory positions. You can also program your memory seat to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved positions.

See the *Seats* chapter in your *Owner's Manual* for more details.

Tilting Front-Row Head Restraints

Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward again releases it to the upright position.



Liftgate

Manual Liftgate

To Open the Liftgate

1. Press the button located inside the liftgate pull cup handle to unlatch the liftgate.
2. Pull on the outside handle to raise the liftgate.

Power Liftgate*

Note: If the vehicle is running, the liftgate operates only with the transmission in park (P).

Touch a Button to Open or Close the Liftgate

Press  on your remote entry transmitter twice within a few seconds or press the  button on the instrument panel. A tone sounds when the liftgate starts to close.

You Can Also Open the Liftgate From the Rear of Your Vehicle

1. Unlock your liftgate and then press the button in the top of the liftgate pull cup handle.
2. Allow the power system to open the liftgate after pressing the button.
3. To close the liftgate, press and release the button on the liftgate.

When the liftgate begins to close, three tones sound.

Setting the Liftgate Open Height

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.

To Program a New Height

1. Open the liftgate.
2. Stop the liftgate movement by pressing the button on the liftgate when it reaches your desired height. When the liftgate stops moving, you can also move it manually to your desired height.
3. Press and hold the button on the liftgate until you hear a tone indicating that your programming of the liftgate height is successful.

The liftgate then opens to its newly programmed height when you use the power feature to open it.

To change the programmed height, repeat the process.



Obstacle Detection

When you use the power open or close feature and the liftgate detects a problem, it sounds warning tones and the liftgate stops.

The Liftgate Cannot Power Open or Close When

- It detects an object in its opening or closing path.
- The vehicle battery does not have enough charge to power the liftgate.
- The ignition is on and the transmission is not in park (P).
- You are traveling at speeds at or above 1 mph (1 km/h).

Note: Entering the vehicle when the liftgate is closing could cause the vehicle to bounce and turn on obstacle detection.

Hands-Free Liftgate Operation*

To Open Your Liftgate Hands-Free While You Are at the Liftgate


1. Make sure you have an intelligent access transmitter* behind the liftgate, within 3 feet (1 meter).
2. Move your foot under and away from the rear bumper using a single kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

Note: In vehicles that have the towing package and the hands-free power liftgate feature, you must move your foot in a single kicking motion between the trailer hitch and the exhaust system. Do not kick under the trailer hitch.



Function

Rear View Camera

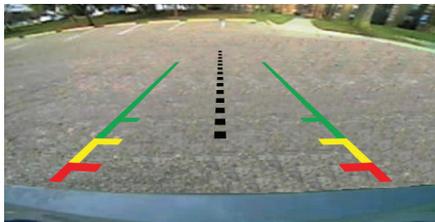

The rear view camera system provides a video image of the area behind the vehicle. The image appears when the transmission is in reverse (R) and uses a variety of guidelines to alert you of your proximity to objects. If your vehicle is equipped with the Obstacle Distance Indicator, the system provides an image of your vehicle and the red, yellow and green sensor zones. For more information about the rear view camera, please see the *Parking Aids* chapter of your *Owner's Manual*.

Note: If mud, water or debris obstructs the camera's view, clean the lens with a soft, lint-free cloth and non-abrasive cleaner.

SelectShift® Automatic Transmission

With SelectShift automatic transmission, you can use the gear shift to change gears without a clutch.

Push the + button on the gearshift lever to activate SelectShift.

- Push the toggle switch (+) to upshift.
- Push the toggle switch (–) to downshift.

For more information and system operation, please see the *Transmission* chapter of your *Owner's Manual*.

SecuriCode™ Keyless Entry Keypad*

The SecuriCode keypad is near the driver window and illuminates when touched. The keypad allows you to lock or unlock the doors without a key. You can operate the keypad with the factory set, five-digit entry code found on the owner's wallet card in the glove box or by using your personal code. You must press each number within five seconds of each other.



To Unlock the Driver Door

Enter the factory-set code or your personal code. The interior lamps light.

To Unlock All Doors

Enter the factory-set code or your personal code, then press 3-4 within five seconds.

To Lock All Doors

Press and hold 7-8 and 9-0 at the same time (with the driver door closed). You do not need to enter the keypad code first.

See the *Doors and Locks* chapter in your *Owner's Manual* for more information on how to use SecuriCode.

MyKey®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

Wiper Operation



Adjust the wiper lever and its controls to operate the front and rear wipers.

- Single wipe: Pull the lever down.
- Intermittent wipe: Raise the lever upward to position 1 and then rotate the control:
 - Upward for short wipe intervals.
 - Downward for long wipe intervals.

- Normal wipe: Raise the lever upward to position 2.
- High-speed wipe: Raise the lever to position 3, its highest position.

Speed Dependent Wipers

When your vehicle speed increases, the interval between wipes decreases.

Rear Window Wiper and Washer

To operate the wiper, press the rocker switch on the end of the lever to change between off, intermittent and low speed.

Depending on your vehicle, when you switch on the front wipers and move the gearshift lever to reverse (R), the rear intermittent wipe may turn on.

To use the rear washer, push the wiper lever away from you. When you release the lever, the rear wiper operates for a short time.

Side Sensing System*

The side sensing system uses the front and rear side sensors to detect and map obstacles that are near the sides of your vehicle. The side sensors are active when the transmission is in any position other than park (P). As the object comes closer to the side of your vehicle, the rate of the audible warning increases.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.



Function

Collision Warning System*

This system alerts you of certain collision risks. The system's sensor detects your vehicle's rapid approach to other vehicles traveling in the same direction as your vehicle. When your vehicle rapidly approaches another vehicle, a red warning light flashes and a tone sounds.

The brake support system assists you in reducing any collision speed by pre-charging the brakes. If the risk of collision continues to increase after the audiovisual warning, the brake support prepares the brake system for rapid braking.

The system does not automatically activate the brakes, but if you press the brake pedal lightly, the brakes apply full stopping power. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more details.

You can adjust the warning system's sensitivity through your information display. Refer to the *Information Displays* chapter in your *Owner's Manual* for more details.

Active Park Assist with Parallel Parking, Perpendicular Parking and Parallel Park Out Assist*

Active Park Assist detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) when you control the accelerator, gearshift and brakes. The system visually and audibly guides you to park your vehicle. Press the Active Park Assist  button once for parallel parking or twice for perpendicular parking. The system displays a message and a corresponding graphic to indicate that it is searching for a parking space. Use the direction indicator to select from which direction you want to begin searching, either to the left- or right-hand side of your vehicle. Use the park out assist feature when your vehicle is at rest in a parallel parking space. Press the button, and then follow the instructions on the display.

Use your direction indicator to signal from which side of your vehicle you want to exit the parking space. After the system directs your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

110-Volt Power Outlet*

The power outlet is on the rear of the center console. You can use it to power electrical devices that require up to 150 watts.



Function

Lane Keeping System*

When you switch the system on and the system detects an unintentional drift out of your lane is likely to occur, the system notifies or assists you to stay in your lane through the steering system and information display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert mode is selected.

You can switch the system on or off by pressing the button on the Direction Indicator.

Refer to the *Driving Aids* chapter of your *Owner's Manual* for system operation and limitations.

Automatic High Beam Control*

The system turns on high beams if it is dark enough and no other traffic is present. If it detects an approaching vehicle's headlamps or tail lamps, or street lighting ahead, the system turns off high beams before they can distract other road users. Low beams remain on.

Adaptive Cruise Control*

Adjusts your vehicle speed to a set gap between you and the vehicle in front of you in the same lane. You can select from one of four gap settings. Refer to the *Cruise Control* chapter of your *Owner's Manual* for more information.

Note: *Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your Owner's Manual for safety information, more details and limitations.*

Blind Spot Information System (BLIS®)*

BLIS aids you in detecting vehicles that enter into your blind spot zone. The system displays an amber indicator light in your exterior mirrors. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.



*if equipped



Autowipers*

The wipers operate when the system detects moisture on the windshield.

- Low sensitivity: The wipers automatically operate when the sensor detects a large amount of moisture on the windshield.
- High sensitivity: The wipers automatically operate when the sensor detects a small amount of moisture on the windshield.

Note: *Keep the outside of the windshield clean. Dirt, bugs and excessive road debris can prevent it from detecting rain.*

To Reduce Smearing, We Recommend the Following:

- Lower the sensitivity of the autowipers.
- Switch to normal or high-speed wipe.
- Switch the autowipers off.

Note: *Make sure you switch off the windshield wipers before entering a car wash.*

Cross Traffic Alert*

This system is designed to warn you of vehicles approaching from the sides when the transmission is in reverse (R). It detects vehicles that approach at speeds of up to 37 mph (60 km/h). The system illuminates an amber alert indicator in the outside mirror on the side of your vehicle from which the approaching vehicle is coming. In addition, cross traffic alert also sounds an audible alert and a message appears in the information display indicating a vehicle is coming from the right or left.

Note: *Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more details and limitations.*



*if equipped

Essential Information

Fuel Tank Capacity and Fuel Info

Your vehicle has a 15.7 gal (59.4 L) fuel tank capacity. We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87. Do not use any other fuel because it could damage or impair the emission control system.

Refueling

When fueling your vehicle:

1. Make sure the ignition is switched off.
2. Fully open the fuel door.
3. Insert the fuel filler nozzle into the fuel system up to the first notch, and leave the nozzle inserted and resting against the cover of the fuel tank until you are done pumping.

4. Make sure you keep the fuel pump nozzle in a level position when refueling or it may impact the flow of the fuel. Improper positioning can also cause the fuel pump to shut off before the fuel tank is full.
5. When you finish refueling, slowly raise and remove the fuel pump nozzle. Fully close the fuel door.

If you are refilling your tank from a fuel container, make sure you use the fuel filler funnel included with your vehicle. Using an aftermarket funnel may not work with the capless system and could cause damage to your vehicle. For more information and for your fuel filler funnel location, please see the *Fuel and Refueling* chapter of your *Owner's Manual*.

Auto-Start-Stop*

The system automatically turns off the engine when you stop your vehicle to help reduce fuel consumption.*

- Automatically turns the engine on when you release the brake pedal.
- Automatically turns the engine on to make sure there is no impact to cabin comfort.

The system turns on automatically each time you start your vehicle, but you can switch it off. Just press the Auto-Start-Stop button on the center console. The button lights when you switch the system off.

Towing Your Escape

Towing your vehicle may be limited. Refer to the *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

Location of Spare Tire and Tools

Your spare tire and tools are under the carpeted wheel cover. A dissimilar spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Wheels and Tires* chapter of your *Owner's Manual*.

Tire Pressure Monitoring System

When one or more of your tires are under-inflated, your vehicle turns on the low tire pressure warning light (⚠) in the instrument cluster. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

Rear Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

Front and Rear Parking Aids*

These systems sound audible warning tones if there is an obstacle near the vehicle's front or rear bumpers. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency.

The front sensors automatically turn on when the transmission is in any position other than park (P) and the vehicle is traveling at a low speed. The system can detect objects up to 28 inches (70 centimeters) away from the front of the vehicle. This range decreases at the outer corners.



The rear sensors are active only when the transmission is in reverse (R) and can detect objects up to 6 feet (1.8 meters) away, with decreased coverage at the outer corners of the bumper.

See the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.

Note: *Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more details and limitations.*

Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.