

**VOICE RECOGNITION TIPS** (If equipped)

**BLUETOOTH®**

**Command** **Example**  
 Dial <Phone #> — “Dial 7-1-4-9-6-5-3-0-0-0”  
 Call <Name> — “Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:  
 • Use full names instead of short or single-syllable names (“John or Dad”)  
 • Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

**NAVIGATION**

**Command** **Example**  
 Find Address — “1-2-3-4-5 1st Street, <House #, Street, City, State>  
 Find <POI Name> — “Find McDonald’s®”


Located on Rearview Mirror **DESTINATION SEARCH BY VOICE**

**Command** **Example**  
 Find <POI Name> — “Find Lowe’s® near me”  
 <POI Name> — “Starbucks®”

EMERGENCY/MANUAL DOOR LOCK


Doors without an outside key hole can be locked as follows:

1. Open the door.
2. Insert the key into the emergency door lock hole and turn key horizontally to lock.
3. Close the door securely.

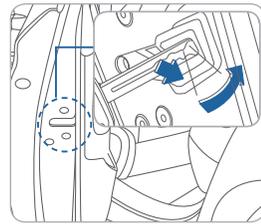


CENTRAL DOOR LOCK/ UNLOCK SWITCH

 Press the central door lock/unlock switch to lock/unlock all vehicle doors.




FUEL FILLER DOOR - page 06

 Unlock the doors and press the fuel door lid at the 3 o'clock position.



WINDSHIELD WIPER SERVICE POSITION

(to lift the wipers off the windshield) - page 10  
 Within 20 seconds of turning off the engine, lift and hold the wiper lever up to the MIST position until the wipers move to the top wipe position

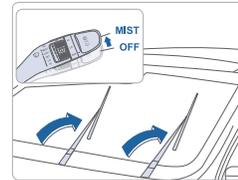

LIFTGATE - page 06

Unlock the doors, press the liftgate handle button and open the liftgate.



BLUE LINK

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link User's Manual
- Encourage customer to download the MyHyundai with Blue Link app

INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT

SET FIRST SERVICE APPOINTMENT

REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE

WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

Sales Consultant \_\_\_\_\_ Date \_\_\_\_\_ Sales Manager \_\_\_\_\_ Date \_\_\_\_\_

Customer \_\_\_\_\_ Date \_\_\_\_\_

Email \_\_\_\_\_

**MAINTENANCE**

Scheduled Maintenance (Normal Usage)	2.0 GDI	1.6T-GDI
Engine Oil and Filter	Replace 7,500 or 12 mos.	Replace 6,000 or 12 mos.
Fuel Additives	Add 7,500 or 12 mos.	Add 6,000 or 12 mos.
Tire Rotation	Perform 7,500	Perform 6,000
Vacuum Hose	Inspect 7,500 or 12 mos.	Inspect 6,000 or 12 mos.
Air Cleaner Filter	Replace 22,500 or 36 mos.	Replace 18,000 or 36 mos.
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace Every 12 mos.	Replace Every 12 mos.
Air Conditioning Refrigerant		
Brake Hoses & Lines		
Drive Shafts & Boots		
Front Brake Disc/Pads, Calipers	Inspect 7,500 or 12 mos.	Inspect 6,000 or 12 mos.
Rear Brake Disc/Pads		
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint, Upper Arm Ball Joint		
Suspension Mounting Bolts		
Exhaust Pipe & Muffler		
Fuel Tank Air Filter		
Vapor Hose & Fuel Filler Cap, Fuel Tank	Inspect 15,000 or 24 mos.	Inspect 12,000 or 24 mos.
Brake/Clutch Fluid		
Parking Brake		
Fuel Filter		
Fuel Lines, Fuel Hoses and Connections	Inspect 30,000 or 48 mos.	Inspect 24,000 or 48 mos.
Drive Belt	Inspect First 60,000 or 72 mos.	Inspect First 60,000 or 72 mos.
	Subsequent, every 15,000 or 24 mos.	Subsequent, every 12,000 or 24 mos.
Spark Plugs	Replace 97,500	Replace 42,000
Coolant	Replace First 120,000 or 120 mos.	Replace First 120,000 or 120 mos.
	Subsequent, every 30,000 or 24 mos.	Subsequent, every 30,000 or 24 mos.
Valve Clearance	-	Inspect 60,000 or 72 mos.
Dual Clutch Transmission Fluid		Inspect 24,000 or 48 mos.
Automatic Transmission Fluid	No checks or services required for Normal Usage driving.	

\*Check the engine oil regularly between recommended oil change intervals. We recommend Quaker State oil.

\*See Owner's Manual for details regarding Severe Usage maintenance recommendations.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

# The Hyundai ELANTRA GT

## Quick Reference Guide



Roadside Assistance: 1-800-243-7766  
 Consumer Affairs: 1-800-633-5151  
 Sirius XM® Radio: 1-800-967-2346  
 Blue Link: 1-855-2BLUELINK (1-855-225-8354)

## **HYUNDAI VEHICLE OWNER PRIVACY POLICY**

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America  
Hyundai Customer Connect Center  
P.O. Box 20850  
Fountain Valley, CA 92728-0850  
800-633-5151 [consumeraffairs@hmmausa.com](mailto:consumeraffairs@hmmausa.com)

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.


Instrument panel illumination  
Page 12

Instrument cluster  
Page 11

Wipers and washer  
Page 10

Navigation  
Page 23

Cruise control/  
Smart cruise control  
with stop & start  
Page 37

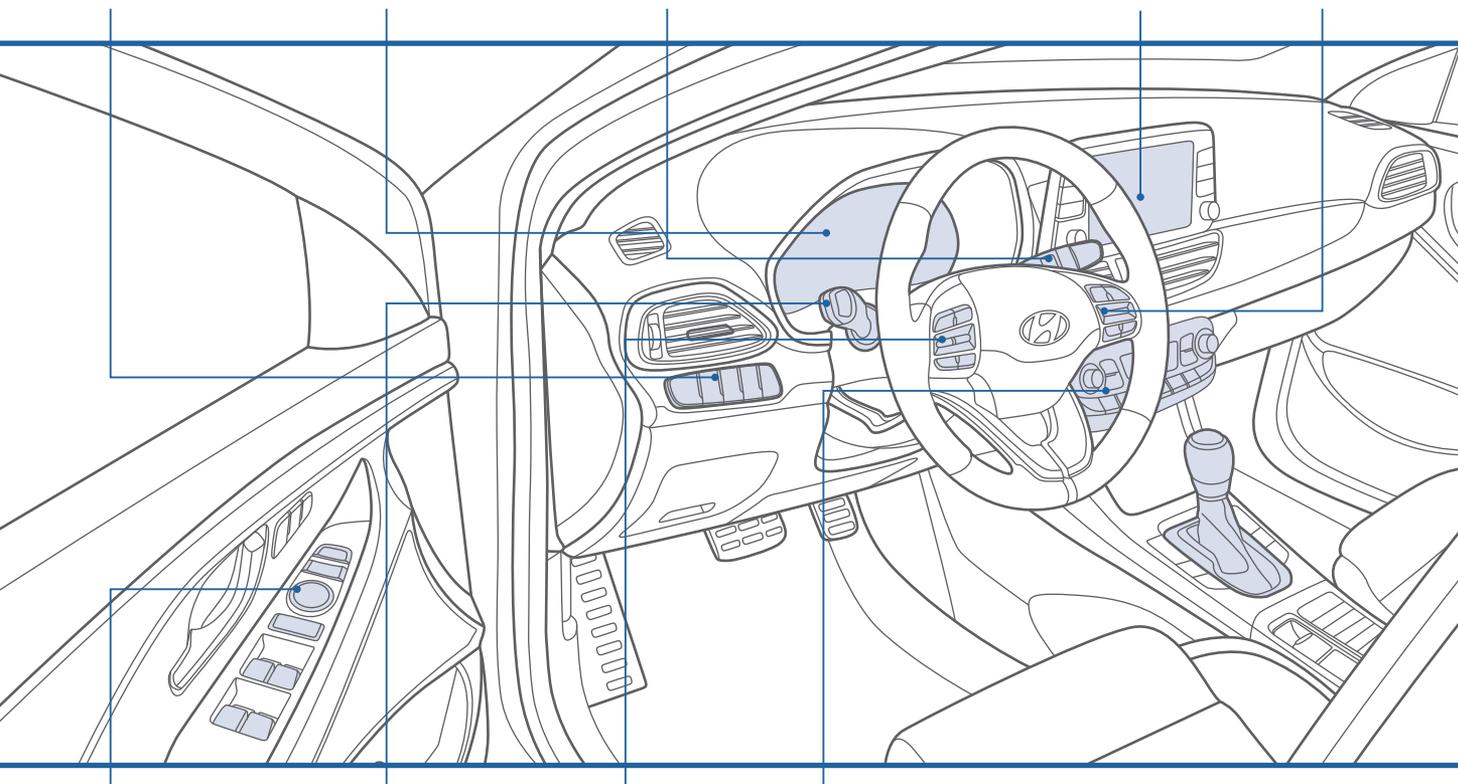

Driver's main controls  
Page 04

Headlights  
Page 09

Steering wheel audio control  
Page 19

Climate control  
Page 15

## FEATURES AND CONTROLS

Central door lock/ unlock switch	05
Child-protector rear door lock	06
Climate control	15
Cluster (LCD) display control	14
Cluster (LCD) display modes	14
Driver's main controls	04
Emergency / manual door lock	05
Fuel filler door	06
Headlights	09
Homelink Wireless Control System	08
Inner door handle	05
Instrument cluster	11
Instrument panel illumination	12
Interior lights	07
Liftgate	06
Remote & smart key	01
Seat-Front seat adjustment (manual)	02
Seat-Front seat adjustment (power)	02
Seat-Head restraint adjustment	03
Seat-Seat belt adjustment (front)	03
Seat-Seat warmer (front seat)	04
Seat-Air ventilation seat (front seat)	04
Service interval reminder system	13
Sunroof	07
Warning and indicators	12
Wipers and washer	10

## INFOTAINMENT

Android Auto	25
Apple CarPlay™	27
AUX, USB and Smartphone Port	24
Bluetooth® phone call operational tips	21
Bluetooth® phone pairing	20
Navigation	23
Steering wheel audio control	19
Voice recognition tips	22
Wireless cellular phone charging system	24

## DRIVING

Auto hold	31
Automatic transmission & Dual clutch transmission (DCT)	38
Blind-spot collision warning (BCW)	35
Cruise control/smart cruise control with stop & start	37
Driver attention warning system (DAW)	34
Drive mode integrated control system	36
Electronic parking brake (EPB)	31
Electronic stability control (ESC)	33
Forward collision-avoidance assist (FCA)	34
Lane keeping assist system (LKAS)	33
Paddle shifter	39
Rear view camera	35
Tire pressure monitoring system (TPMS)	32


### WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.


\* Some vehicles may not be equipped with all the listed features.

## REMOTE & SMART KEY

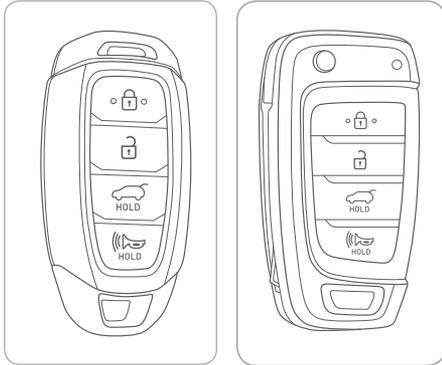


-  Lock
-  Unlock
-  Liftgate Unlock
-  Panic (press and hold)

**NOTE:** The Liftgate Unlock button only unlocks the latch. It does not raise the liftgate.

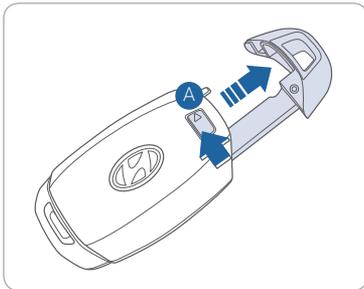


**Removing the mechanical key**  
Slide and hold the release button **A** to remove the mechanical key.

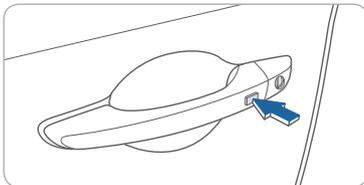

**Driver's door Lock / Unlock**  
Smart key must be within 28-40in. from the outside door handle.  
**Press:** One time - Unlock driver door  
Two times - Unlock all doors  
Three times - Lock all doors

**NOTE:** User selectable option : Please see section 3 from Owner's Manual for more details.

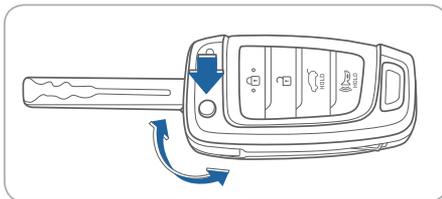

To unfold the mechanical key, press the release button on the remote.

## FRONT SEAT ADJUSTMENT (MANUAL)



Forward and backward **1**



Seat height **2**



Push down/ Pull up on the lever several times to lower/ raise the seat cushion height.

 
Seatback angle **3**





## FRONT SEAT ADJUSTMENT (POWER)



Forward and backward **1**



Seat cushion height and angle **1**

  


Seatback angle **2**



Lumbar Support (driver's seat only) **3**



## HEAD RESTRAINT ADJUSTMENT

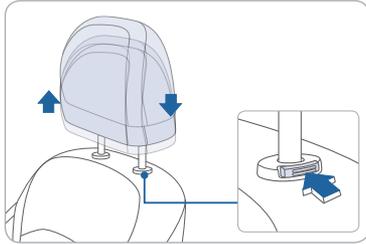


**To Raise the Head Restraint:**  
Pull headrest up.

**To Lower the Head Restraint:**  
Press lock button while pressing down on headrest.

**NOTE:** To avoid discomfort during long drives, adjust the seat back angle further back so the headrest does not become uncomfortable from contact with the driver's head.

## SEAT BELT ADJUSTMENT (FRONT SEAT)

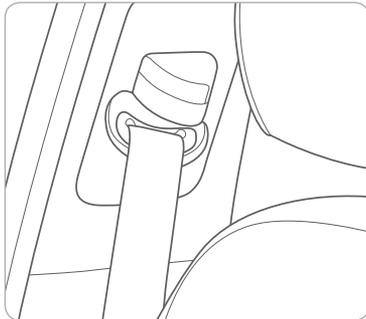


Pull up to raise.



Press button and push down to lower.

## SEAT WARMER (FRONT SEAT)

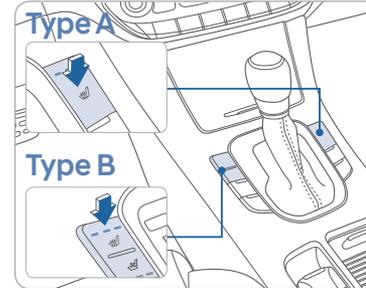


Each time you push the button, the setting is changed as follows:

OFF → HIGH → MEDIUM → LOW

If you want to turn it off immediately, press and hold the button.

## AIR VENTILATION SEAT (FRONT SEAT)

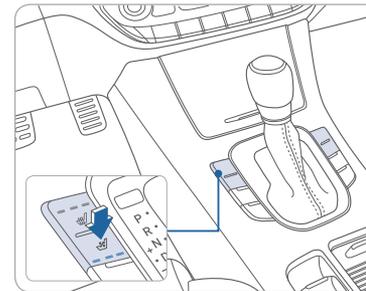


Each time you push the button, the setting is changed as follows:

OFF → HIGH → MEDIUM → LOW

If you want to turn it off immediately, press and hold the button.

## DRIVER'S MAIN CONTROLS

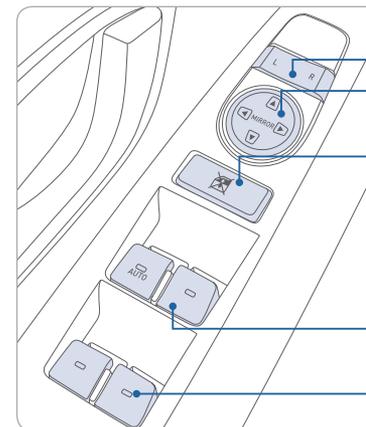

### Side view mirror

- Press the L or R button.
- Adjust the mirror by using the directional switch.


### Power window lock button

Disables the power window switches on the rear passenger doors.

### Window switches

- Front doors power window switches.
- Rear doors power window switches.

## INNER DOOR HANDLE

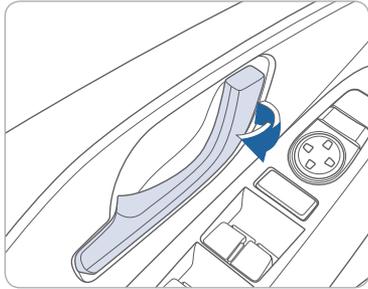


### Front door

Pull the inner door handle to unlock and open the door.

### Rear door

Pull the inner door handle:  
Once → Unlocks the door  
Twice → Opens the door


## CENTRAL DOOR LOCK/ UNLOCK SWITCH

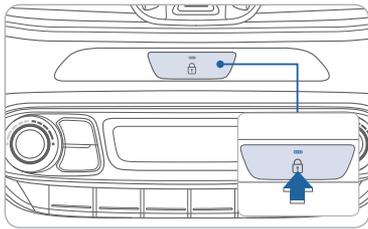

Press the central door lock/unlock switch to lock/unlock all vehicle doors. All doors must be closed to use the central door lock switch.

LED on = doors are locked.  
LED off or blinking = doors are not locked


## EMERGENCY / MANUAL DOOR LOCK

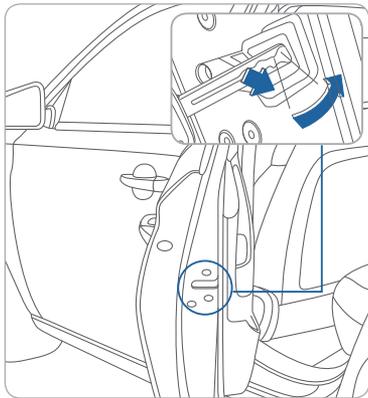

Doors without an outside key hole can be locked as follows:

1. Open the door.
2. Insert the key into the emergency door lock hole and turn key horizontally to lock.
3. Close the door securely.

## CHILD-PROTECTOR REAR DOOR LOCK

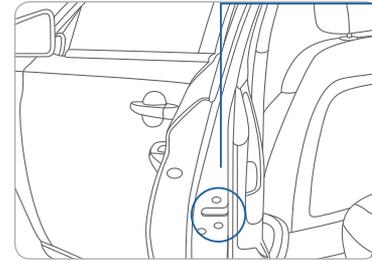


### Lock

Insert a key or screw driver into the hole and turn it to the lock position.


### Unlock

Insert a key or screw driver into the hole and turn it clockwise to the unlock position.

## FUEL FILLER DOOR

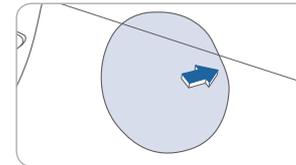

1. Push the center edge of the fuel filler door when the driver's door is unlocked.

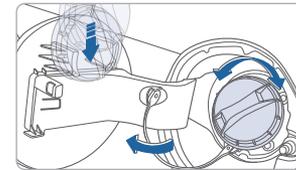


2. Remove the fuel tank cap.

### NOTE:

Tighten the fuel filler cap until one click is heard.

## LIFTGATE

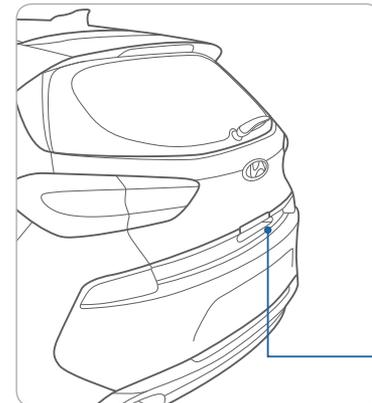

### Type A



### Remote Key

Press and hold to unlock the trunk.

Press the Liftgate handle button and open the liftgate.

### Type B




### Smart Key


With the smart key 28-40 inches from the liftgate, press the liftgate handle button to open.



## SUNROOF

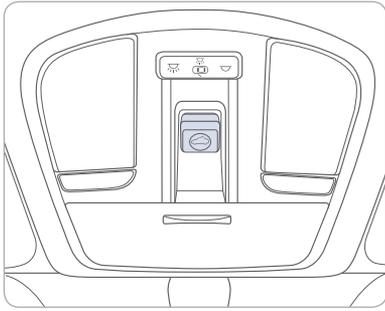


### Sunshade

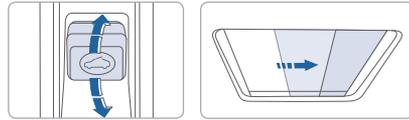


To open the sunshade, pull the sunroof control lever lightly backward to the first detent position. Push the sunroof control lever forward to close.

### Sliding the Sunroof

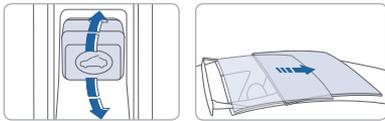


Pull and hold the sunroof control lever backward to the first detent to open the sunroof incrementally. Pull the sunroof control lever backward past the first detent to slide open the sunroof completely. Push the sunroof control lever forward to the second detent position to close sunroof glass with the sunshade.

### Tilting the Sunroof

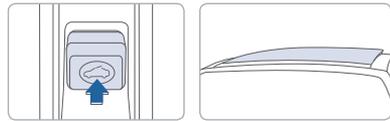

Push the sunroof control lever upward to tilt open the sunroof. Push again the sunroof control lever upward to tilt the sunroof glass closed.

## INTERIOR LIGHTS

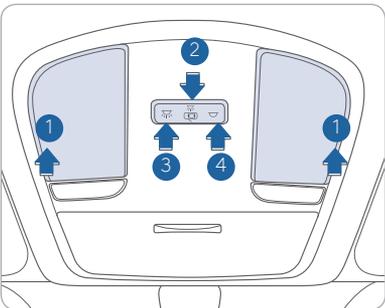

### Front map lamp <sup>1</sup>

Press the lens to turn the map lamp on or off.

### Front door lamp <sup>2</sup>

Lights will turn on when any door is open.



### Front room lamp <sup>3</sup>

Push the switch to turn the room lamp on.

### Front room lamp <sup>4</sup>

Push the switch to turn the room lamp off.

## HOMELINK WIRELESS CONTROL SYSTEM

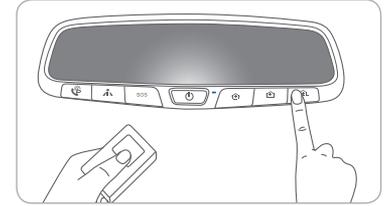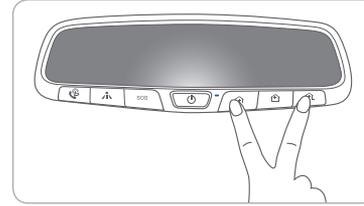

### Standard Programming

1. For first time programming, press and hold the two outside buttons ( , ) until the indicator light starts to flash. (to reprogram buttons, skip this step)
2. Press and hold the desired button ( , or ) and your transmitter's button at the same time until the Homelink indicator light changes from a slow to a rapid blink.


(The transmitter has to be 1 to 3 inches away from the mirror)  
The desired Homelink button is now programmed.

**NOTE:** If you have a rolling code garage door opener, complete additional steps:

3. Locate the "Learn" or "Smart" button on your garage door opener. Press and release the button and complete Step 4 within 30 seconds.
4. Return to the vehicle and press the programmed Homelink button up to 4 times (or until the garaged door operates)

For more detailed information, please refer to your Owner's manual or visit [www.homelink.com](http://www.homelink.com) or call (800) 355-3515

## HEADLIGHTS

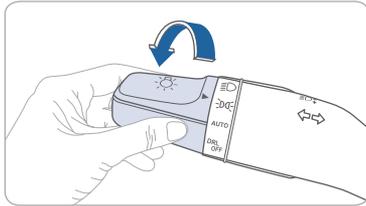


- ▶ Headlights on
- ▶ Parking lights on
- ▶ **AUTO** Auto headlights on
- ▶ **DRL OFF** DRL OFF


### Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press the lock button on the remote key or smart key twice to turn the headlights off.


### Turn signals and lane change signals

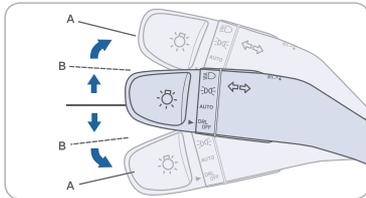


### Flashing headlights

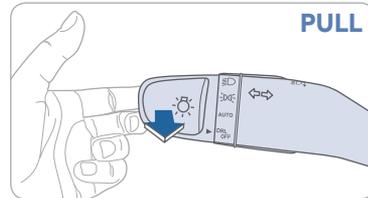

### High beams

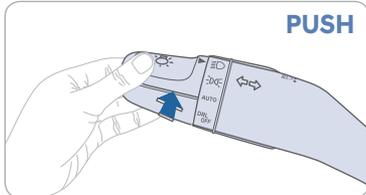

### Smart High Beam

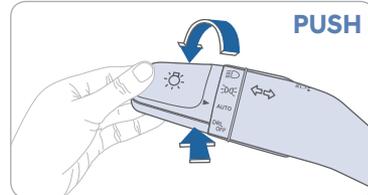


**NOTE:** To turn off the high beam, pull the lever towards you.

### Smart High Beam Function


1. Select the AUTO position on stalk.
2. Push the lever forward to engage the Smart High beam.
3. Pull the lever towards you to disengage.

## WIPERS AND WASHER

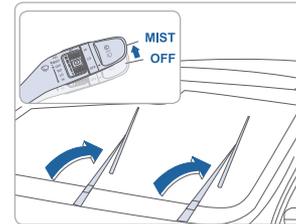


### Windshield Wiper Service Position (to lift the wipers off the windshield)

Within 20 seconds of turning off the engine, lift and hold the wiper lever up to the MIST position until the wipers move to the top wipe position.

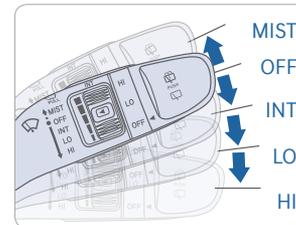


- MIST** - Single wipe
- OFF** - Off
- INT** - Intermittent wipe
- LO** - Low wiper speed
- HI** - High wiper speed

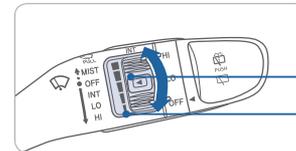


### Intermittent wipe time adjustment

Move the speed control switch  
Fast wiper speed  
Slow wiper speed

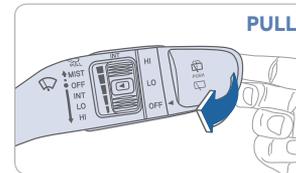


### Windshield Washer

**Front:** Pull the lever towards you to spray washer fluid and run the wipers briefly.

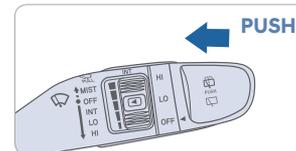

**Rear:** Push the lever away from you to spray washer fluid on the rear window and run the wiper briefly.

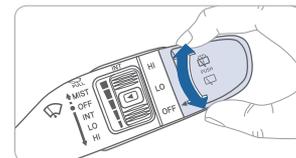

- Rear Wiper Control**
- HI** - High wiper speed
- LO** - Low wiper speed
- OFF** - Off

## INSTRUMENT CLUSTER

### Type A – Standard



- 1 Tachometer
- 2 Speedometer
- 3 Engine coolant temperature gauge
- 4 Fuel gauge
- 5 Warning and indicator lights
- 6 LCD display (including Trip computer)


### Type B – Style Package and GT N Line




## WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & brake fluid warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake force Distribution (EBD) System warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine oil pressure warning light	Low fuel level warning light	Low tire pressure warning light / TPMS malfunction
Master warning light	EPB Electric Parking Brake (EPB) warning light	AUTO HOLD indicator
Electronic Stability Control (ESC) Indicator Light	Electronic Stability Control (ESC) OFF indicator light	Immobilizer indicator
Turn signal indicator light	High beam indicator light	Light ON indicator light
Exterior light warning light	Smart high beam indicator	Icy road warning light
CRUISE Cruise indicator	SET Cruise SET indicator	SPORT mode indicator
Washer fluid warning light (if equipped)	Forward Collision-Avoidance Assist	Lane Keeping Assist System (LKAS) Indicator

## INSTRUMENT PANEL ILLUMINATION

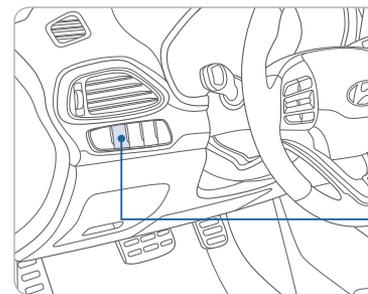

Press the illumination control button to adjust the instrument cluster illumination brightness.

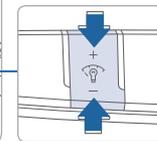

## SERVICE INTERVAL REMINDER SYSTEM




This system is designed to notify you of your next vehicle maintenance interval.

To Activate:

Press the  (Mode) button on steering wheel and navigate to user settings and select the following:


Service Interval > Enable Service Interval > Set/Adjust Interval.

## CLUSTER (LCD) DISPLAY CONTROL

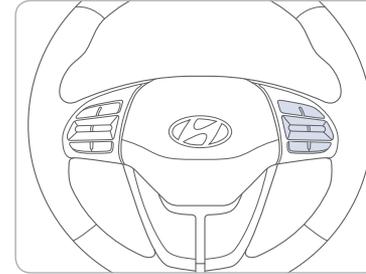


- 1  : MODE button for changing modes
- 2  : MOVE switch for changing items
- 3  : SELECT / RESET button for setting or resetting the selected item

### Type A

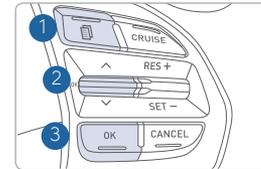


### Type B

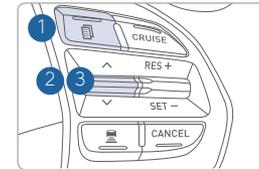

## CLUSTER (LCD) DISPLAY MODES


Modes	Symbol	Explanation
Trip Computer		This mode displays driving information such as the tripmeter, fuel economy, etc.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Assist		This mode displays the state of : - Lane Keeping Assist System (LKAS) - Smart Cruise Control with Stop & Start - Driver Attention Warning (DAW) - Tire Pressure
User Settings		In this mode, you can change settings of the doors, lamps, etc.
Warning		This mode displays warning messages related to the Blind Spot Detection system, etc.

## MANUAL CLIMATE CONTROL

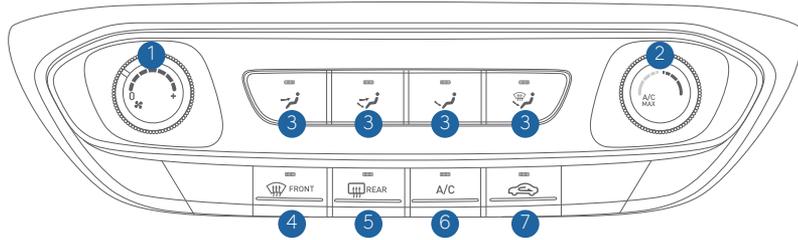

- 1 Fan speed control knob
- 2 Temperature control knob
- 3 Mode selection buttons
- 4 Front windshield defroster button
- 5 Rear window defroster button
- 6 A/C (Air conditioning) button
- 7 Air intake control button


### Defogging / Defrosting

 

1. Press the front windshield defrost button.



 
2. Set the temperature control to the warmest setting.



3. Set the fan speed to the medium setting.

**NOTE:** To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.


### Mode selection

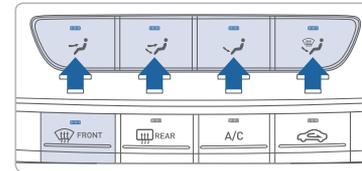

Changes the direction of the air flow as follow.

- Face-Level
- Bi-Level
- Floor-Level
- Floor & Defrost-Level
- Defrost-Level

### Rear window defroster

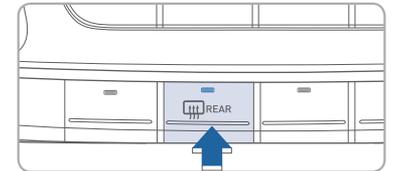

Press to activate/deactivate the rear window defroster.

### Air intake control



Recirculated air position




Outside (fresh) air position

The climate control system will automatically change to the outside (fresh) air position when:


- Defrost-Level or Floor & Defrost Level modes are selected.
- The sunroof is open

## AUTOMATIC CLIMATE CONTROL

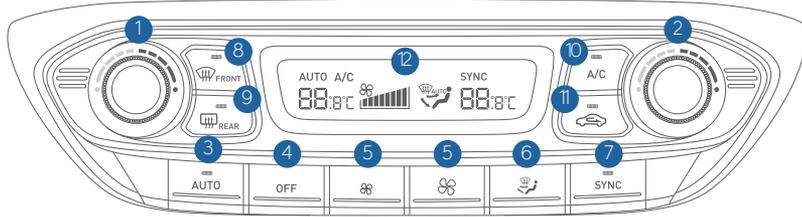


- 1 Driver's temperature control knob
- 2 Passenger's temperature control knob
- 3 AUTO (automatic control) button
- 4 OFF button
- 5 Fan speed control button
- 6 Mode selection button
- 7 SYNC button
- 8 Front windshield defroster button
- 9 Rear window defroster button
- 10 Air conditioning button
- 11 Air intake control button
- 12 Climate control information screen

### Defogging / Defrosting

 

 1. Press the front windshield defrost control button.




2. Set the temperature control to the warmest setting.



3. Set the fan speed to the medium setting.

**NOTE:** To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

### Automatic heating / air conditioning

 


1. Press the AUTO button.



2. Set the temperature control to the desired setting.

Controls the modes, fan speeds, air intake and air-conditioning automatically. Hyundai recommends to use the AUTO function for normal daily driving. Adjust the temperature as desired.


### System off

 

Pressing the OFF button will place the system in the OFF mode.

- Blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

### Mode selection

 

Changes the direction of the air flow as follow.



### Air intake control



Recirculated air position

 
The climate control system will automatically change to the outside (fresh) air position when:



Outside (fresh) air position


- AUTO mode is selected
- Defrost-Level or Floor & Defrost Level modes are selected.
- The sunroof is open

### Sync button




Press the SYNC button to adjust the driver and passenger side temperature and air flow direction equally.

### Rear window defroster

 

Press to activate/deactivate the rear window defroster.

## STEERING WHEEL AUDIO CONTROL

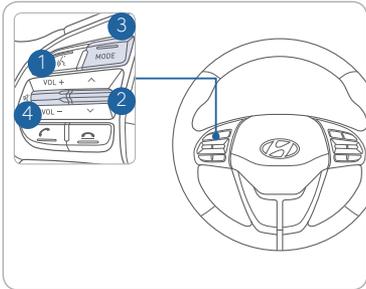


- 1 **VOICE RECOGNITION**  
Activates the voice recognition system.
- 2 **SEEK / PRESET (▲/▼)**  
Changes station.
- 3 **MODE**  
Changes the audio source.
- 4 **VOLUME (VOL + / -)**  
Increase or decrease the volume. Press to Mute.

Position, tone, priority and advanced sound settings can be customized in the audio/ navigation unit. Press the SETUP  button then select Sound.

## BLUETOOTH® PHONE PAIRING


Phone setup (pairing phone) with Audio

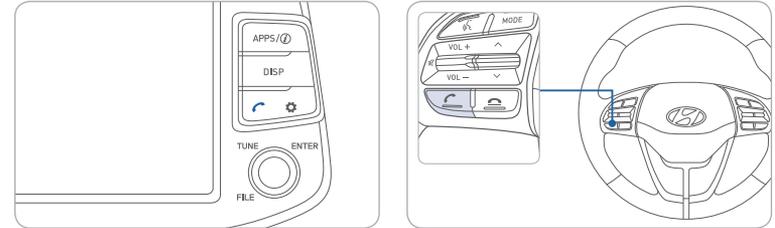

1. Press the PHONE() button in the head unit or CALL() button in the steering wheel remote control.
2. Pair your car after your mobile phone detects the Bluetooth device.
3. Enter the passkey or accept the authorization popup.
4. Connect Bluetooth.

**NOTE:** Vehicle must be parked to complete pairing process.

Phone setup (pairing phone) with Navigation

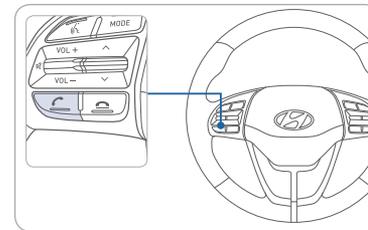

1. Press the CALL() button in the steering wheel remote control.
2. Pair your car after your mobile phone detects the Bluetooth device.
3. Enter the passkey or accept the authorization popup.
4. Connect Bluetooth.


**NOTE:** Vehicle must be parked to complete pairing process.

## BLUETOOTH® PHONE CALL OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth® volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

### Steering wheel bluetooth® control

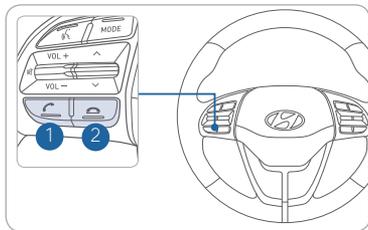

- 1 **CALL**  
Places and transfers calls.
- 2 **END**  
Ends calls or cancels functions.

#### To Answer a Call:

- Press the button on the steering wheel.

#### To Reject a Call:

- Press the button on the steering wheel.

#### To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel while it is ringing.

#### To Transfer a Call to the Phone

(Private call on handset – do not use while driving):

- Press and hold the button on the steering wheel until the audio system transfers a call to the phone.

#### To Finish a Call:

- Press the button on the steering wheel.

## VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.


Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when driving in a tunnel or when driving on rugged and uneven roads.

### Quick reference on using voice commands

To start voice command, press the key, the following commands are available:

Command	Function
Call	Displays downloaded Contacts.
Call <Name>	Calls <Name> saved in Contacts.
Dial Number	Displays a screen where you can say a phone number to dial.
Dial <Phone #>	You can directly say the number to call. ex) Dial 111 555 1234
Redial	Calls the number you last dialed.

### Making a call using voice recognition:

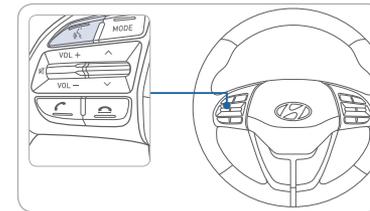

Press button on the steering wheel control to activate voice recognition.

Press and hold button to end voice recognition.

#### Calling by Name:

1. Press the button.
2. Say the following command:
  - “Call <John Smith>”: Connects the call to John.
  - “Call <John Smith> <on Mobile / at Work / at Home / on Other>”: Connects the call to John’s Mobile, Work, Home, or Other phone number.

#### Dialing by Number:

1. Press the button.
2. Say “Dial Number.”
3. Say the desired phone number.

For the complete list of commands, refer to your Owner’s Manual.

## NAVIGATION

Basic features on the map screen



Press **[MAP]** button in the navigation head unit.

- 1 Move to the Home Screen
- 2 Change the map view mode
- 3 Voice Guidance On/Off
- 4 Zoom in the map
- 5 Set the zoom level automatically according to the guidance
- 6 Zoom out the map
- 7 Quick and easy selection of a destination and options
- 8 Touch to scroll the map
- 9 Start Guidance
- 10 Route Options
- 11 Save frequently used address to address book
- 12 Find a POI (Point of Interest) around the current position
- 13 View the vehicle's current position on the map screen


Destination search screen



Press **[NAV]** button in the navigation head unit, and find a destination by using the **[Destination]** menu.

- 1 Address : Set destination by address search.
- 2 Previous destinations : Select from previously inputted addresses and POIs.
- 3 Online Search: Runs online search.
- 4 POI categories : Select the desired item in the sub-categories.
- 5 Gas stations : Select the desired destinations among the searched gas stations.
- 6 Restaurants : Select the desired destination among the searched restaurants.
- 7 Emergency : Select the desired destination among the searched emergency facilities.
- 8 Address Book : Search the destination with the address book.
- 9 Coordinates : You can find a destination by entering the coordinates of latitude and longitude.


## WIRELESS CELLULAR PHONE CHARGING SYSTEM

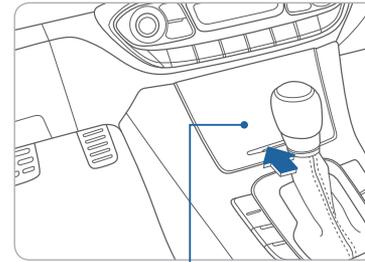

There is a wireless cellular phone charging system inside the front console. The system operates with all doors closed, and the ignition switch is in the ACC/ON position.

### NOTE:

The wireless cellular phone charging system supports only the Qi-enabled cellular phones (Qi).

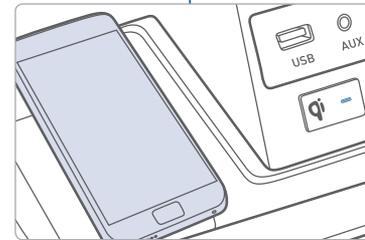


### NOTE:

Do not place any metallic items such as coins and keys on the charger. Avoid putting credit cards, etc. on the charger as they might get damaged by the magnetic field.

### NOTE:

User selectable option. Please see section 3 from Owner's Manual for more details.

## AUX, USB AND Smartphone Port

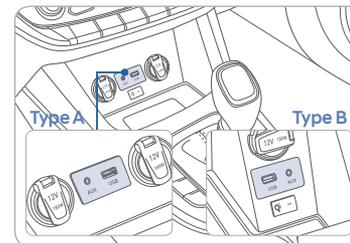

Use the AUX or USB ports to connect an external audio device and listen to it through the audio system in your vehicle.

Use this USB port to access Android Auto or Apple CarPlay with your compatible phone.

## ANDROID AUTO™

### REQUIREMENTS:

- USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

### BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them or
  - Disconnect and then reconnect your phone
- Using the USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

### ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

## PHONE SETUP


Activate Bluetooth from your mobile device, and connect the USB Cable from your device to the USB port on the vehicle.

Phone will prompt you to download the Android Auto app and update other needed apps (i.e. Google Maps™, Google Play Music™, Google Now™).

**NOTE:** Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

## CAR SETUP

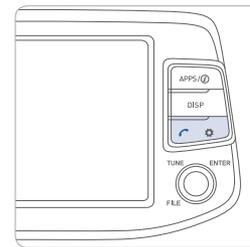

1. Press the SETUP button on the radio.
2. Touch the “Phone Projection” icon on screen.
3. Select “On” for Android Auto.
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

For more detailed information on how to operate Android Auto, please refer to your display audio or navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website

<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

## APPLE CARPLAY™

### REQUIREMENTS

- Apple Lightning® cable
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


### BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them or
  - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

### PHONE SETUP

On your phone, go to Settings > General > CarPlay to allow CarPlay access.

On your phone, go to Settings > Siri and ensure Siri is turned ON.

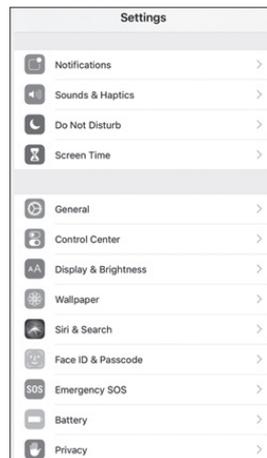


### CAR SETUP

1. Press the SETUP button.
2. Touch the “Phone Projection” icon on the screen.
3. Touch “iOS” on the Phone Projection Settings screen then touch “On” to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.



Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

## CarPlay Home Screen

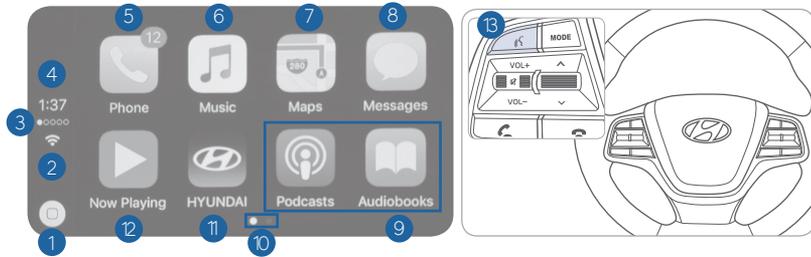

- |                         |                                 |
|-------------------------|---------------------------------|
| ① HOME ICON             | ⑦ APPLE MAPS                    |
| ② WIRELESS CONNECTIVITY | ⑧ MESSAGES                      |
| ③ CELLULAR SIGNAL       | ⑨ 3RD PARTY APPS                |
| ④ PHONE TIME            | ⑩ SCREEN PAGE INDICATOR         |
| ⑤ PHONE                 | ⑪ EXIT TO HYUNDAI               |
| ⑥ APPLE MUSIC™          | ⑫ CURRENT CARPLAY AUDIO PLAYING |
|                         | ⑬ VOICE RECOGNITION BUTTON      |

## SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon ① on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION ⑬ button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > Siri).

3. Say any of the following commands;
  - “Text <John Smith> ‘Call you later’” to send a text message.
  - “Read text messages” to read available text message.
  - “Call <John Smith>” to make a phone call.
  - “Find <POI/Destination>” to locate a POI/Destination.

## PHONE

Touch the PHONE ⑤ icon to access the Phone screen. Siri will automatically asks ‘Who do you want to call’ when the PHONE ⑤ icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

## APPLE MUSIC

Touch the APPLE MUSIC ⑥ icon to access the Apple Music screen.

## APPLE MAPS

Touch the APPLE MAPS ⑦ icon to access the Apple Map screen.

## MESSAGES

Touch the MESSAGES ⑧ icon to access the Message screen. Siri will automatically asks ‘Who do you want to send it to’ when the MESSAGE icon is selected.


## 3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.

## ELECTRONIC PARKING BRAKE (EPB)

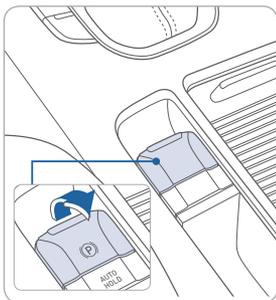


### Applying EPB

Depress the brake pedal and then pull up the EPB switch.

### Releasing EPB

Turn the engine ON, depress the brake pedal and push the EPB switch down. Automatically release EPB (with engine ON, doors closed, and seat belt fastened): shift from P (Park) to R (Reverse) or D (Drive) then depress the accelerator pedal.


## AUTO HOLD

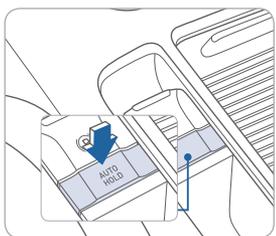

The Auto Hold feature assists in hilly areas. It applies the brake until the accelerator pedal is pressed.

**WHITE  
AUTO  
HOLD**

1. Press the AUTO HOLD switch. When the AUTO HOLD indicator is white, the system is on and in standby mode.

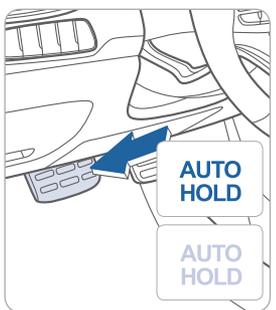

**GREEN  
AUTO  
HOLD**


2. When you stop the vehicle completely by using the brake pedal and the AUTO HOLD indicator turns green, Auto Hold will maintain the brake pressure to hold the vehicle stationary. Press the accelerator pedal to resume driving.

**LIGHT  
OFF  
AUTO  
HOLD**

3. To turn off the Auto Hold feature, press the brake pedal and press the AUTO HOLD switch. The AUTO HOLD indicator light will turn off.

This feature resets to OFF every time the engine is restarted.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

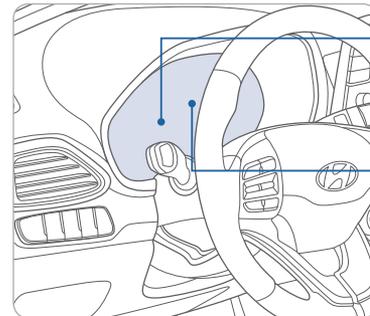

Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure / Tire Pressure Monitor / TPMS Malfunction Display (shown on the cluster LCD display)


### LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires are significantly under-inflated.

### TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, we recommend the vehicle be checked by an authorized HYUNDAI dealer as soon as possible.

### LOW TIRE PRESSURE / TIRE PRESSURE MONITOR / TPMS MALFUNCTION DISPLAY(LCD DISPLAY)

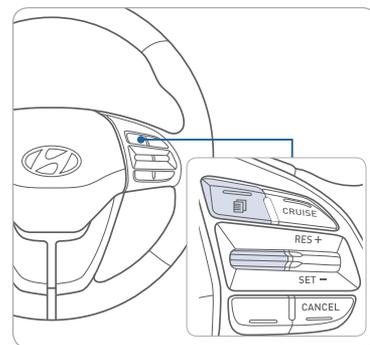


Select the Assist mode  by pressing the mode button on the steering wheel to display tire pressure.

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator  will illuminate and the cluster  display will indicate tire(s) requiring air.

### NOTE:

Environmental factors can affect the tire pressure. The two main environmental factors are ambient air temperature and elevation. Colder ambient air will reduce tire pressure, while hotter ambient air will increase tire pressure. High elevation may also increase tire pressure.

## ELECTRONIC STABILITY CONTROL (ESC)

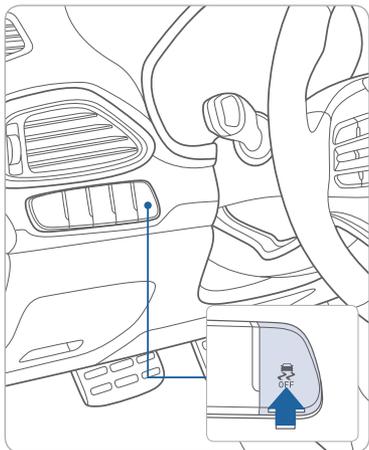


The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

ESC automatically selects the ON position when the engine is started.

**To turn off Traction Control**  
Press the ESC OFF button once.

**To turn off Traction & Stability Control**  
Press the ESC OFF button for more than 3 seconds.

## LANE KEEPING ASSIST SYSTEM (LKAS)

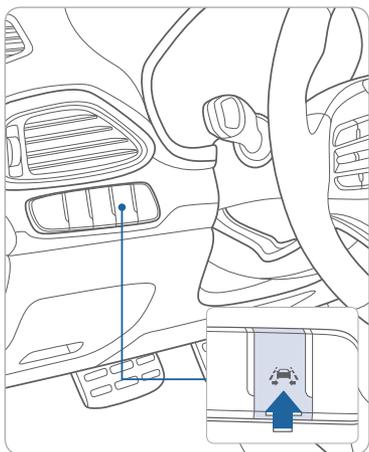

The Lane Keeping Assist System detects lane markers on the road, and assist the driver's steering to help keep the vehicle between lanes.

- To turn on the LKAS, press the LKAS switch.
- To turn off the LKAS, press the switch again.

LKAS operates only while the vehicle speed is over 40mph and below 110mph.

For more detailed information, please refer to Section 5 of the Owner's Manual.

## FORWARD COLLISION-AVOIDANCE ASSIST (FCA)



The Forward Collision Avoidance (FCA) system is designed to detect and monitor the vehicle ahead and warn the driver if a collision is imminent. On vehicles equipped with both camera and radar sensor, pedestrian detection is also available.


To operate the system, select the FCA (Forward Collision Avoidance Assist) sub menu in the LCD cluster display under User Settings. Please refer to your Owner's Manual for further information.

**Early:** This setting maximizes the amount of distance between the vehicle or pedestrian ahead before the initial warning occurs.

**Normal:** This setting allows for a nominal amount of distance between the vehicle or pedestrian ahead before the initial warning occurs.

**Late:** This setting reduces the amount of distance between the vehicle or pedestrian ahead before the initial warning occurs.

## DRIVER ATTENTION WARNING SYSTEM (DAW)

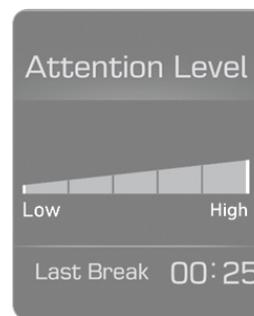


The Driver Attention Warning System (DAW) system displays the condition of the driver's fatigue level and inattentive driving practices. The DAA system monitors the lane markers and driver's inputs to the steering wheel, accelerator pedal and brake pedal.

To turn ON the Driver Attention Alert system, turn on the engine, and then select 'User Settings → Driving Assist → Driver Attention Alert → Normal / Early' on the LCD Display.

The Driver Attention Warning System (DAW) operates when driving over 40mph. The system can be reset when the driver turns the engine OFF.

For more detailed information on any of these topics, please refer to Section 5 of the Owner's Manual.

## BLIND-SPOT COLLISION WARNING (BCW)

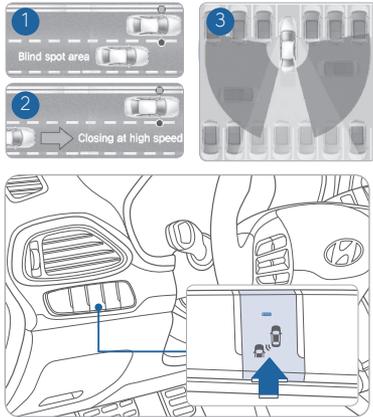

The Blind Spot Detection system uses radar sensors to monitor and warn the driver of an approaching vehicle in the driver's blind spot area.


- 1 Blind-Spot Collision Warning (BCW)
- 2 Lane Change Assist (LCA)
- 3 Rear Cross-Traffic Collision Warning (RCCW)

- To turn on the BCW, press the BCW button (indicator illuminated).
- BCW and LCA operate in D (Drive) over appx. 20mph.
- RCCW operates in R (Reverse) under appx. 7mph.
- To turn off the BCW, press the BCW button again.

### Rear Cross Traffic Alert

When the vehicle is in R (Reverse), the system provides an alert if a vehicle or pedestrian is approaching from the sides.

## REAR VIEW CAMERA

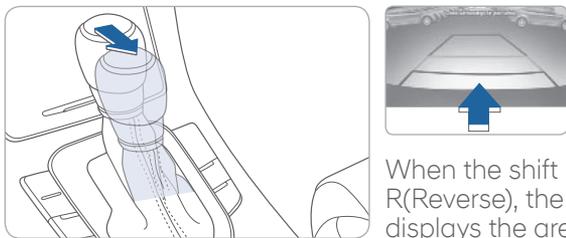


When the shift lever is moved to R(Reverse), the rear view camera displays the area behind the vehicle.

**NOTE:** The image displayed on the screen may become difficult to see under the following conditions:

- In the dark or at night.
- When it is raining, or when water droplets are on the camera.
- When the sun or the beam of headlights are shining into the camera lens.

Use care to keep the camera lens clean and avoid applying any type of solvents, car wax, or window cleaners to the camera lens. If the lens becomes dirty, wipe the lens with a clean and soft cloth.

## DRIVE MODE INTEGRATED CONTROL SYSTEM

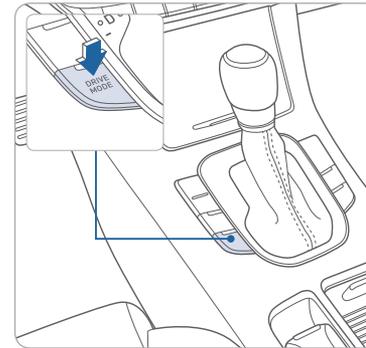

The drive mode may be selected according to the driver's preference or road condition. The system resets to NORMAL mode every time the engine is restarted. Each time you press the button, the drive mode changes as following :



### NORMAL mode

Normal mode provides regular daily driving performance with some fuel efficiency. When Normal mode is selected, it is not displayed on the instrument cluster.


### SPORT mode

Sport mode focuses on enhanced driving dynamics by adjusting the steering feel along with the responsiveness of the engine and transmission. In Sport mode, the fuel efficiency may decrease.

#### To improve your fuel efficiency:


- Drive smoothly and accelerate at a moderate rate.
- Avoid heavy accelerations.
- Maintain steady cruising speed.
- Adjust the vehicle speed to the traffic condition and avoid speed changes.
- Avoid unnecessary braking.
- Keep the tires inflated to the recommended tire pressure.
- Do not idle the engine longer than necessary.

## CRUISE CONTROL / SMART CRUISE CONTROL WITH STOP & START

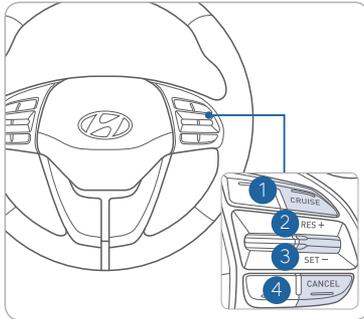

The Cruise Control system allows you to program the vehicle to maintain a constant speed without depressing the accelerator pedal.


- 1 To turn on/off the cruise control.
- 2 To resume or increase the cruise control speed.
- 3 To set or decrease the cruise control speed.
- 4 To cancel the cruise control set speed.

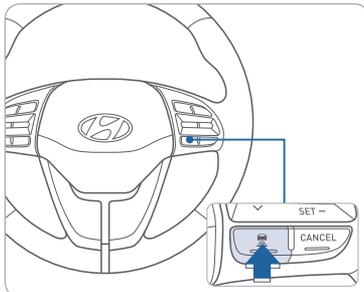

### Setting Vehicle Distance (Smart Cruise Control only)

This system allows you to program the vehicle to maintain constant speed and minimum distance between the vehicle ahead. The vehicle to vehicle distance 1 will automatically activate when you set the cruise speed 2.


 
Each time the vehicle distance set button is pressed, the vehicle to vehicle distance changes as following:



Advanced Smart Cruise Control will stop your vehicle if the vehicle ahead of you stops. If the vehicle ahead of you starts moving, your vehicle will start as well. However, if the vehicle stops for more than 3 seconds, you must depress the accelerator pedal or push up/down the toggle switch (RES+/SET-) to start driving.

For more detailed information please refer to Section 5 of the Owner's Manual.

## AUTOMATIC TRANSMISSION & DUAL CLUTCH TRANSMISSION (DCT)

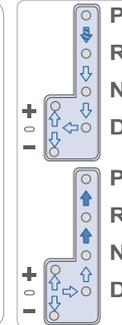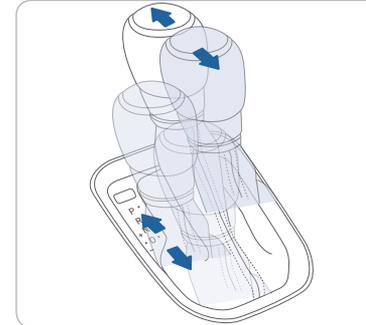

- (↔): Depress the brake pedal and press the shift button while moving the shift lever.
- (→): Press the shift button while moving the shift lever.
- (↔): The shift lever can freely operate.

### Manual shift mode

Move the shift lever from D (Drive) into the manual gate to select. Move the shift lever forward (+) to up shift or rearward (-) to downshift

**NOTE:** Dual Clutch Transmission (DCT) characteristics  
 The technology of the Dual Clutch Transmission is different from a traditional automatic transmission:

- The DCT can be thought of as an automatically shifting manual transmission. It gives the driving feel of a manual transmission, yet provides the ease of a fully automatic transmission.



