

BLUETOOTH®

Command **Example**
 Dial <Phone #> — “Dial
 7-1-4-9-6-5-3-0-0-0”
 Call <Name> — “Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:
 • Use full names instead of short or single-syllable names (“John or Dad”)
 • Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

- BLUE LINK – pages 18**
 - Assist with creating MyHyundai.com account
 - Assist with Blue Link enrollment
 - Show Blue Link Users Manual
 - Encourage customer to download the MyHyundai with Blue Link app

- Date/Time – pages 20**
 - Demonstrate how to set Date/Time (including daylight savings setting for Navigation equipped vehicles)

- TIRE PRESSURE MONITORING SYSTEM (TPMS) – page 30**
 - Explain TPMS function of customer
 - When illuminated, one or more tires are under-inflated
 - Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS



- VEHICLE SETTINGS – pages 10 and 19**
 - Demonstrate vehicle settings in instrument cluster
 - Demonstrate navigation use, enter dealer address
 - Show radio presets
- INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT**
- SET FIRST SERVICE APPOINTMENT**
- REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE**
- WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?**

Sales Consultant	Date	Sales Manager	Date
Customer		@	Date
Email			

MAINTENANCE

Unit: mile

Scheduled Maintenance (Normal Usage)		2.0 Turbo
Engine Oil & Filter	Replace	6,000 or 12 mos.
Fuel Additives	Add	6,000 or 12 mos.
Battery Condition		
Brake Lines, Hoses & Connections		
Front Brake Disc/Pads, Calipers		
Rear Brake Disc/Pads		
Steering Gear Box, Linkage & Boots, Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	6,000 or 12 mos
Drive Shafts & Boots		
Suspension Mounting Bolts		
Air Conditioning Refrigerant		
Air Conditioning Compressor		
Exhaust Pipe & Muffler		
Air Cleaner Filter	Inspect	6,000 or 12 mos
	Replace	24,000 or 48 mos.
Vacuum Hose	Inspect	6,000 or 12 mos.
Climate Control Air Filter (For Evaporator and Blower Unit)	Replace	12 mos.
Tire Rotation	Perform	6,000
Vapor Hose, Fuel Tank Cap, Fuel Tank		
Fuel Tank Air Filter	Inspect	12,000 or 24 mos.
Fuel Filter		
Parking Brake		
Brake Fluid	Inspect	12,000 or 24 mos.
Fuel Lines, Fuel Hoses & Connections	Inspect	24,000 or 48 mos.
		First 60,000 or 72 mos.
Drive Belts	Inspect	Subsequent, every 12,000 or 24 mos.
Spark Plugs	Inspect	42,000
Engine Coolant	Replace	First 120,000 or 120 mos.
		Subsequent, every 30,000 or 24 mos.
Valve Clearance	Inspect	60,000 or 72 mos.
Intercooler, in/out hose, air intake hose	Inspect	6,000 or 12 mos.
Manual Transmission Fluid	Inspect	40,000

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing, however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

The Hyundai VELOSTER N

Quick Reference Guide



Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
Sirius XM® Radio: 1-800-967-2346
Blue Link: 1-855-2BLUELINK
 (1-855-225-8354)

HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.


You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 20850
Fountain Valley, CA 92728-0850
800-633-5151 consumeraffairs@hmasusa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

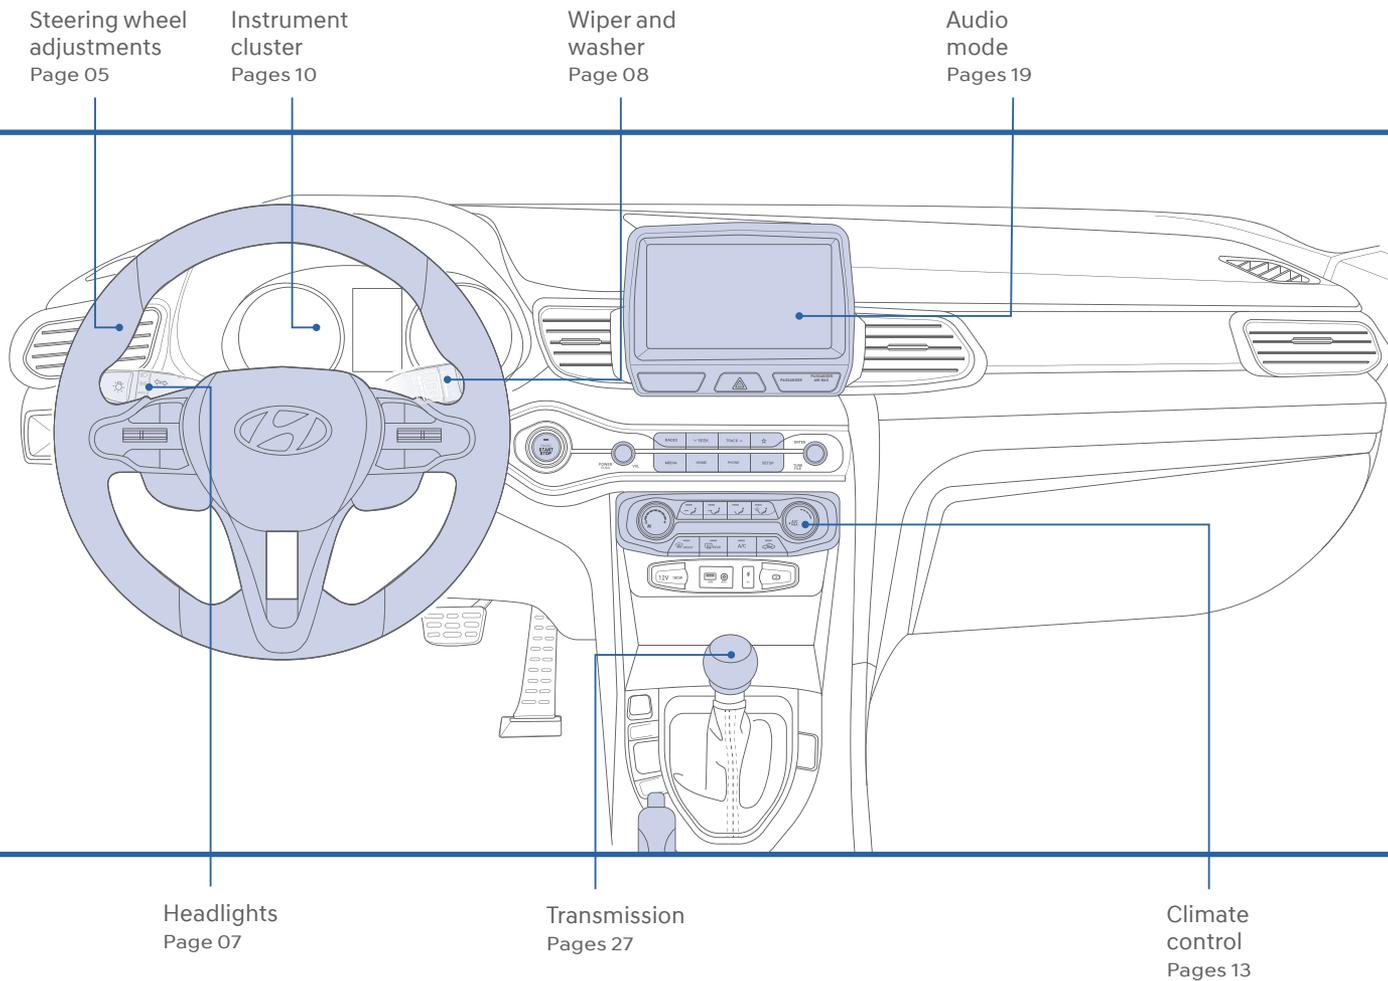

Steering wheel adjustments
Page 05

Instrument cluster
Pages 10

Wiper and washer
Page 08

Audio mode
Pages 19

Headlights
Page 07

Transmission
Pages 27

Climate control
Pages 13

FEATURES AND CONTROLS

Central door lock switch	06
Child-protector rear door lock	09
Climate control	13
Driver's main controls	06
Engine Start/Stop button	02
Fuel door	05
Headlights	07
Instrument cluster	10
Instrument panel illumination	11
Interior lights	09
Liftgate operation	04
Remote keyless entry	01
Seat-Front seat adjustment	03
Seat-Headrest adjustment	03
Seat-Seat belt adjustment	04
Service Interval Reminder System	12
Steering wheel adjustments	05
Trip computer	11
Warnings and indicators	12
Wiper and washer	08

INFOTAINMENT

Android Auto	21
Apple CarPlay™	23
Audio mode	19
AUX, USB and iPod® Port	20
Blue Link® Connected Car system	18
Bluetooth operational tips	16
Bluetooth phone pairing	15
Date/time adjustment	20
Steering wheel audio control	16
Voice recognition tips	17


DRIVING

Cruise control	28
Blind-spot collision-avoidance assist(BCA)	32
Electronic Stability Control (ESC)	31
Drive mode	33
Rearview camera	29
Rev match	32
Shift light	31
Transmissions	27
Tire Pressure Monitoring System (TPMS)	30


Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

*Some vehicles may not be equipped with all the listed features.

REMOTE KEYLESS ENTRY

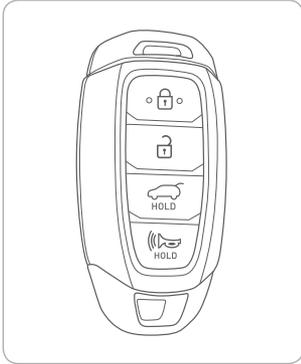


-  Lock
-  Unlock
-  Tailgate unlock (press and hold)
-  Panic (press and hold)

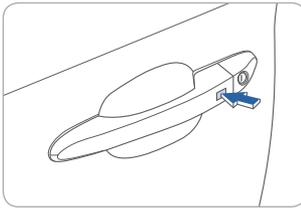

Driver's door Lock/Unlock
Smart key must be within range.


Press:
One Time – Unlock driver door
Two Time – (in 4 seconds) Unlock all doors
Three Time – Lock all doors

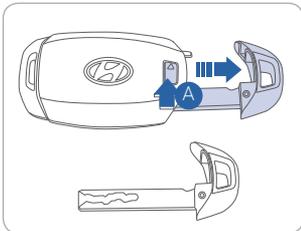

Remove mechanical key
Press and hold the release **A** button and remove the key.

Reinstall mechanical key
Put the key into the key slot and push it until a click sound is heard.

ENGINE START / STOP BUTTON

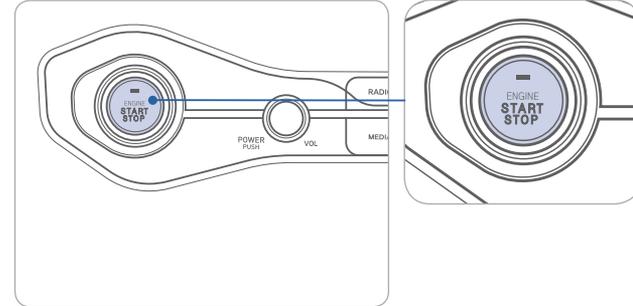

With the ignition OFF, press the engine start/stop button:

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine, press the start/stop button while:

- Manual Transmission: depressing the clutch and brake pedal.


To shut engine OFF, shift to:

- Manual Transmission: Select Neutral, apply the hand brake, and press the start/stop button.

Emergency situations

- **Shut off engine while driving:**
Press engine start/stop button for more than 2 seconds or press it 3 times consecutively within 3 seconds.
- **Restart engine while driving:**
Press engine start/stop button with shift lever in N (Neutral).


FRONT SEAT ADJUSTMENT

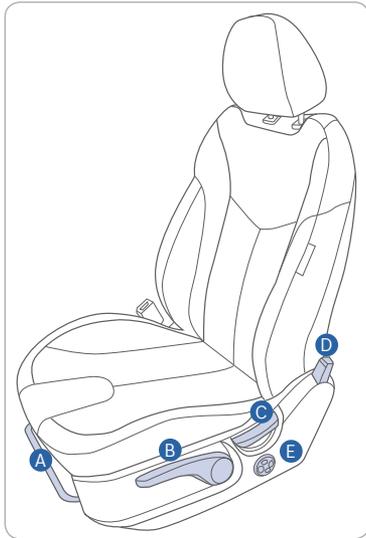

A Forward / backward



B Seat height (driver's seat only)

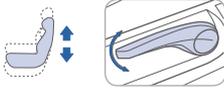


C Seatback angle




D Folding Lever (driver's seat only)



E Lumbar support (driver's seat only)

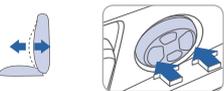

HEADREST ADJUSTMENT

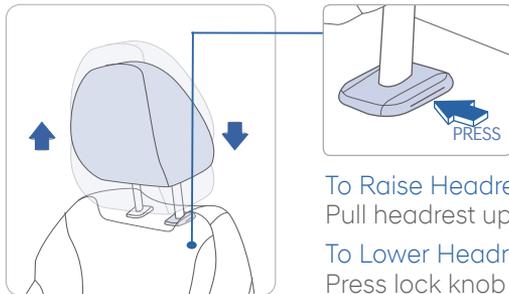


To Raise Headrest:
Pull headrest up.

To Lower Headrest:
Press lock knob while pressing down on headrest.

NOTE

To avoid discomfort during long drives, adjust the seat back angle further back so the headrest does not become uncomfortable from contact with the driver's head.


SEAT BELT ADJUSTMENT (Driver's Front seat)

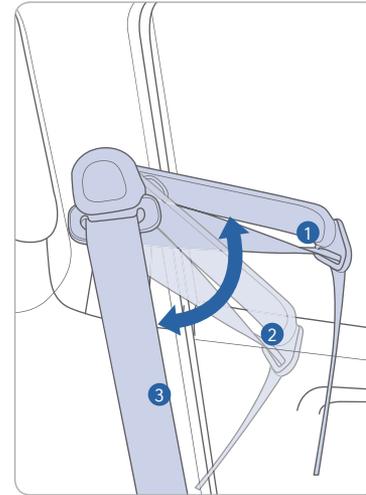

Set the belt extension guide to one of the 3 positions when using the seat belt.

See Owner's Manual for additional seat belt information.

LIFTGATE OPERATION

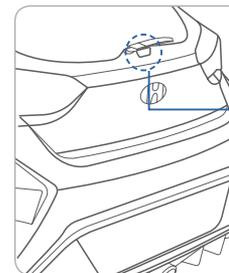

Press to open. Smart key must be within the range.





Press and hold to unlock.


NOTE

This operation will not lift open the liftgate.

STEERING WHEEL ADJUSTMENTS

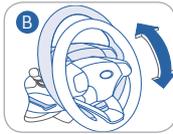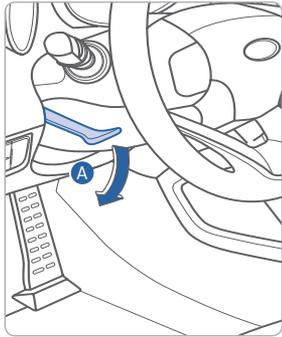

Tilt


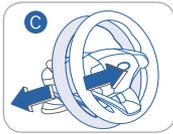


Telescopic

NOTE: Do not adjust while driving.

1. Pull the lever **A** down to release.
2. Set the angle **B** and distance **C**.
3. Pull the lever **A** up to lock.

FUEL DOOR

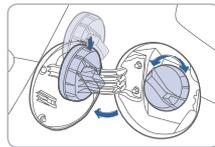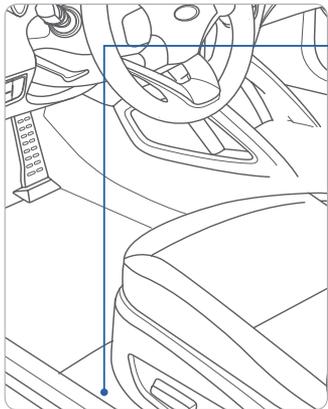


1. To open fuel door, pull lever upward
2. Rotate the fuel cap counter clockwise to open.

NOTE

After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks once.

Failure to do this may result in the Check Engine Light (🚗) illuminating.

DRIVER'S MAIN CONTROLS

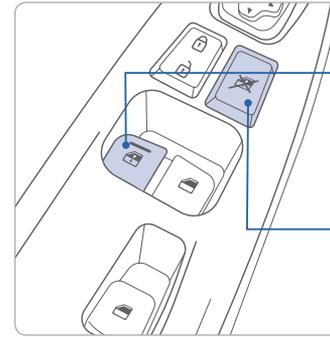


Window Auto down/up (driver's side only)

Press to fully open/close window.

Power Window Lock Switch

Disables the power window switches on the passenger doors.

Push down to disable passenger power window controls.

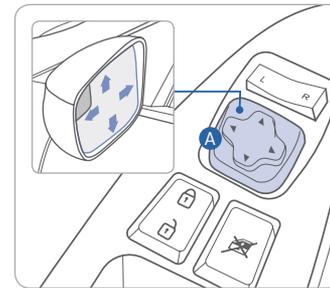

Outside Rearview Mirrors


Move the switch **A** to the right or left to adjust the outside rearview mirrors.

Depress the appropriate direction (⬅️➡️) on the switch.

Middle position

Push the switch left or right to select mirror to adjust. To lock adjustment controls, position the switch to the middle position.


CENTRAL DOOR LOCK SWITCH

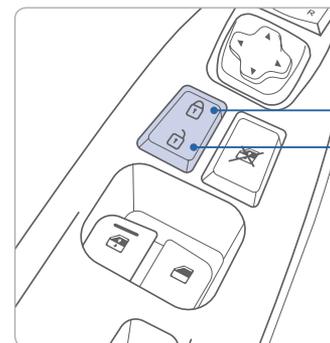

All doors will lock.

All doors will unlock.

HEADLIGHTS

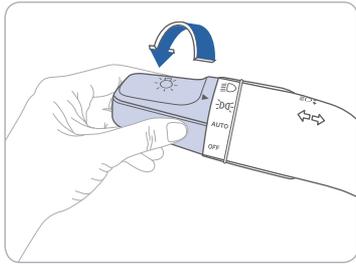


- ▶ | **AUTO** | Headlights will illuminate automatically as needed
- ▶ |  | Turns headlights on
- ▶ |  | Turns parking lights on
- ▶ | **OFF** | All lights off

Escort Function


Headlights will stay on for approximately 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlight off.

See Owner's Manual for more details.


Turn signals **A** and lane change signals **B**

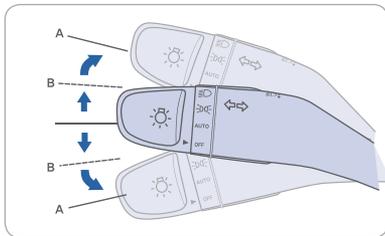


Flashing headlights

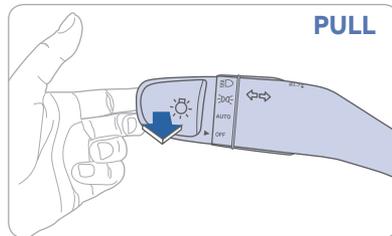

High beam

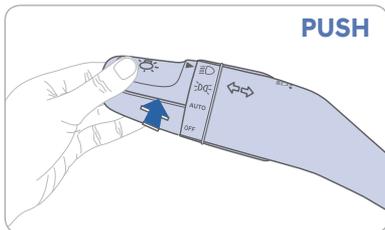


Fog light

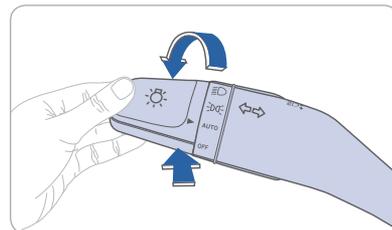


WIPER AND WASHER

Front Wiper and Washer

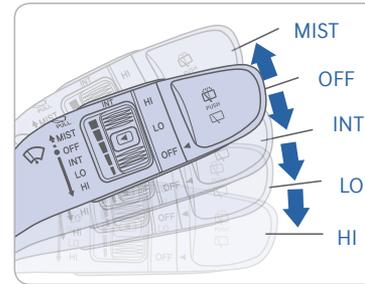


- MIST** - Single wipe
- OFF** - Off
- INT** - Intermittent wipe or **AUTO** - Auto control wipe
- LO** - Low wiper speed
- HI** - High wiper speed

Front intermittent wiper time adjustment

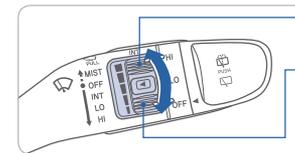

- More frequent wipes
- Less frequent wipes
- Wash with Brief Wipes
- Pull the lever toward you.


Rear Wiper and Washer

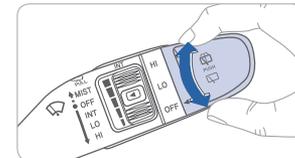

- HI** - High wiper operation
- LO** - Low wiper operation
- OFF** - Wiper off
- Push away for rear wash

INTERIOR LIGHTS

Map lamp

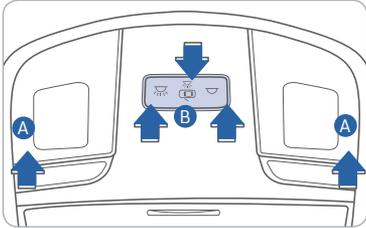

1. Map light

Press the lens **A** to turn map lights ON or OFF.

2. Door position

Map light and cabin light will turn on when any door is open except tailgate.


3. Cabin Light ON position

Press the switch **B** to the left to turn on cabin light.

4. Cabin light OFF position


Press the switch **B** to the right to leave cabin light off.

Cabin lamp

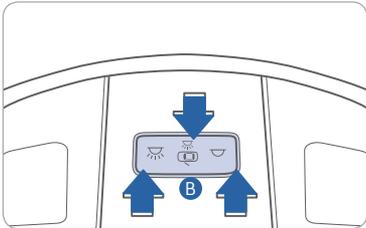

CHILD-PROTECTOR REAR DOOR LOCK

Allows or prevents opening the rear door from inside of the vehicle.

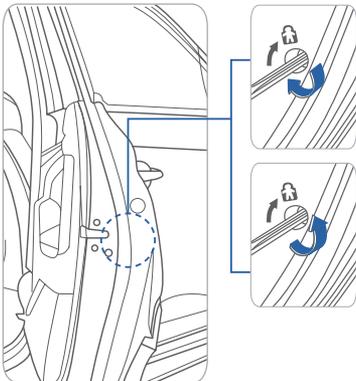

Lock (🔒)

Insert a key into the hole and turn it to the lock (🔒) position.

Unlock


Insert a key into the hole and turn it clockwise to the unlock position.

INSTRUMENT CLUSTER




- 1 Tachometer
- 2 Engine Coolant Temperature Gauge
- 3 Turn signal indicators
- 4 Odometer/Trip computer
- 5 Warning and indicator lights
- 6 Fuel Gauge
- 7 Speedometer


INSTRUMENT PANEL ILLUMINATION

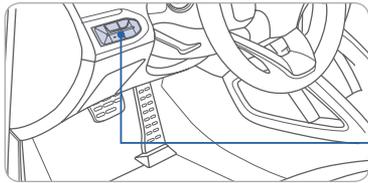


Push +/- on the control switch to adjust the brightness.

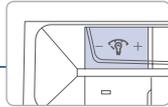

TRIP COMPUTER

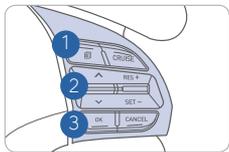

- 1 : MODE button for changing modes
- 2 : MOVE switch for changing items
- 3 : SELECT / RESET button for setting or resetting the selected item

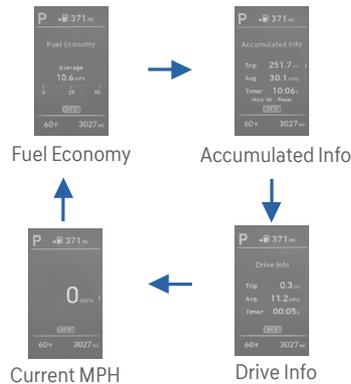

WARNINGS AND INDICATORS

Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Low Tire Pressure Indicator / TPMS (Tire Pressure Monitoring System) malfunction indicator	
High beam indicator	Engine oil pressure warning light	Charging system warning light
EPS Electric Power Steering system warning light	Door open warning light	Turn signal indicator
Immobilizer indicator	Low beam indicator	Manual transmission shift indicator
Tailgate open warning light	Low fuel level warning light	ESC (Electronic Stability Control) indicator
ESC (Electronic Stability Control) OFF indicator	CRUISE Cruise indicator	SET Cruise SET indicator
Malfunction indicator light	Light on indicator	Engine coolant temperature warning light
KEY OUT KEY OUT indicator		

SERVICE INTERVAL REMINDER SYSTEM



This system is designed to notify you of your next vehicle maintenance interval.


To Activate:

Press the (Mode) button on steering wheel and navigate to user settings and select the following:




Service Interval > Enable Service Interval > Set/Adjust Interval.

CLIMATE CONTROL

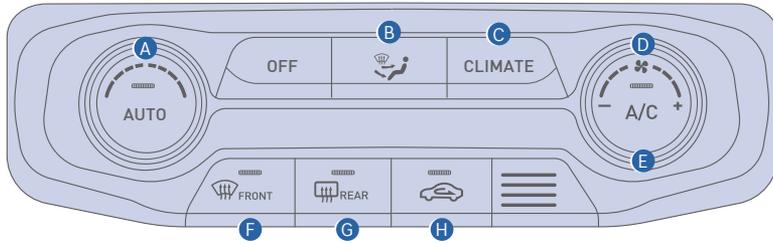

- A** Temperature control knob
- B** Mode selection button
- C** Climate display button
- D** Fan speed control buttons
- E** Air Conditioning button
- F** Front windshield defroster button
- G** Rear window defroster button
- H** Air intake control button

AIR INTAKE CONTROL

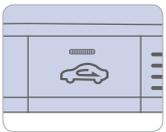


- Outside (fresh) air position
- Recirculated air position

AUTOMATIC HEATING / AIR CONDITIONING



The modes, fan speeds, air intake and air conditioning will be controlled automatically by the temperature setting you select.


DEFROSTING / DEFOGGING

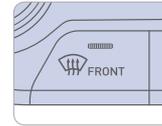

1. Press the front windshield defroster control.



2. Set the temperature control to the warmest setting.

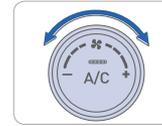


3. Set the fan speed to the medium setting.

NOTE

To reduce the tendency of the glass fogging and improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

REAR WINDOW DEFROSTER

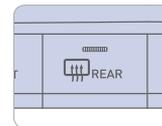

Press to activate / deactivate the rear window defroster.


BLUETOOTH PHONE PAIRING

Pairing tutorials, phone compatibility and Operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.



Phone setup (pairing phone)


NOTE Vehicle must be in park to complete pairing process.

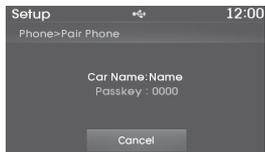

1. Press PHONE button on the radio or on the steering wheel.
2. Press the “Bluetooth” button on the screen.
3. Press “Add New” button on the screen.
4. Search for the device name as displayed on your mobile phone and connect.
5. If necessary, input the passkey displayed on the Audio screen.
6. Pairing is complete.

Please visit www.hyundaiusa.com/Bluetooth for a list of compatible phones tested to work with Hyundai's Bluetooth® system.

STEERING WHEEL AUDIO CONTROL

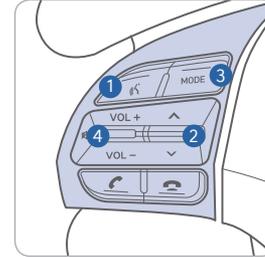


- 1 **VOICE RECOGNITION**
Activates the voice recognition system.
- 2 **SEEK / PRESET** ()
Changes station.
- 3 **MODE**
Changes the audio source.
- 4 **VOLUME (VOL + / -)**
Increase or decrease the volume.
Press to Mute.

BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. When the Bluetooth volume is at a high level. To reduce echo and distortion, try lowering the volume.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Bluetooth control

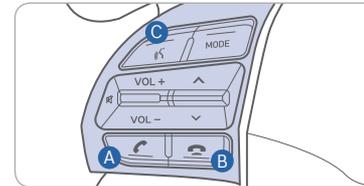

- A **CALL**
Place and transfer call.
- B **END**
End call or cancel function.
- C **VOICE RECOGNITION**
Activate voice recognition.

To Answer a Call:

- Press button on the steering wheel.

To Reject a Call:

- Press button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone (Private Mode):

- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:

- Press button on the steering wheel.

Making a call using voice recognition: 🗣️

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:

1. Press 🗣️ button.
2. Say the following command:
 - “Call <John Smith>”: Connects the call to John.
 - “Call <John Smith> on <Mobile/Home/Office>”: Connects the call to John’s Mobile, Home, or Office phone number.

Dialing by Number:

1. Press 🗣️ button.
2. Say “Dial Number”.
3. Say desired phone numbers.
4. Say “Dial” to complete the call.

For complete list of commands, refer to your Owner’s Manual.

VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology, which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.


Voice recognition performance may be affected if driving with windows and sunroof open; when the heating-cooling system is on; when passing through a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands

To start voice command. Press the 🗣️ key, the following commands are available:

Command	Function
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call “John”
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call “123”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Contacts” to execute corresponding functions.
Call History	Displays the Call History screen.
Contacts (Call by Name)	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect the cell.

BLUE LINK CONNECTED CAR SYSTEM

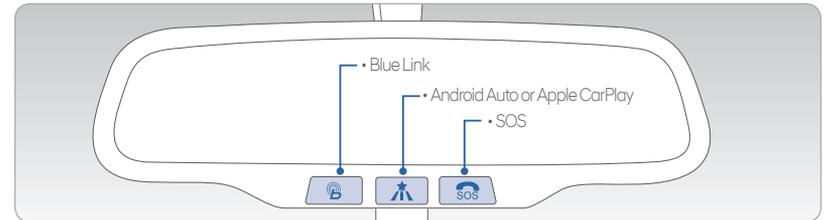

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the **B** button for access to the voice-response menu of services.

- You can say:

- Service Link
- Roadside Assistance
- Blue Link Account Assistance
- Help
- Cancel

Press the **🗣️** button to access Android Auto or Apple CarPlay.

Press the **SOS** button for SOS Emergency Assistance.

Visit HyundaiBlueLink.com for more information or refer to your Blue Link User’s Manual for detailed information on system operation.

For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

The MyHyundai with Blue Link App


You can download the MyHyundai with Blue Link app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android™ — Google Play™

Visit HyundaiBlueLink.com FAQs to see a list of compatible devices.



AUDIO MODE

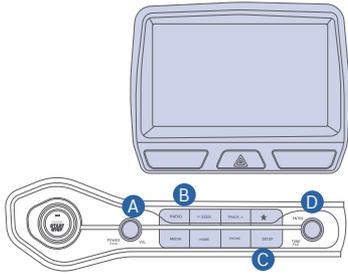

Press POWER button **A** to turn radio on.

• TUNING/LISTENING TO CHANNELS

1. Press RADIO button **B**.
2. Rotate TUNE knob **D** to desired channel.

NOTE

A clear view of the southern sky is recommended to ensure SXM® radio reception.

• SETTING PRESET BUTTONS (FM/AM/SXM)™

40 preset frequencies for each radio modes can be stored manually.

1. Select the radio mode you want to store a station into.
2. Select the desired station.
3. Touch and hold one of the preset buttons until audible beep is heard.


• ADJUSTING THE SOUND

1. Press SETUP button **C**.
 2. Touch “Sound” on screen.
- Touch the arrows on screen to adjust desired sound setting.



*SiriusXM® is only available on Display Audio Light and Navigation

AUX, USB AND iPod® PORT

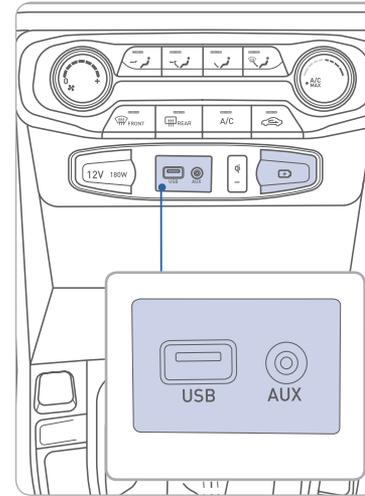

Use the AUX or USB ports to connect an external audio device and listen to it through the audio system in your vehicle.

Use this USB port to access Android Auto or Apple CarPlay with your compatible phone.

Charging Port


Use the charging port to charge your device with an authorized cable.

NOTE


The data USB port is not for charging.

iPod® is a trademark of Apple Inc.

DATE/TIME ADJUSTMENT

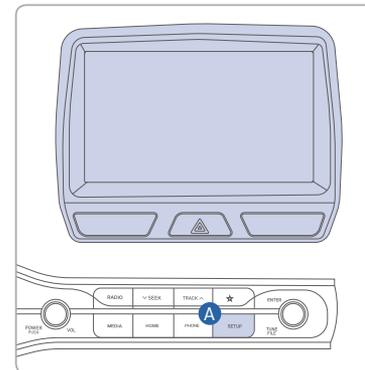

1. Press the SETUP button **A**.
2. Swipe right to the second page and press the Date/Time icon.
3. Set time and date.
4. Press the back button to save setting.

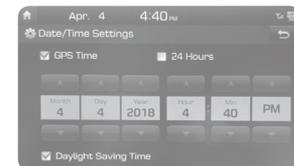

ANDROID AUTO™

REQUIREMENTS:

- USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
- Using the USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

PHONE SETUP

Activate Bluetooth on your phone and connect the USB cable from your mobile device to the USB Port in your vehicle.


Phone will prompt you to download the Android Auto app and update other needed apps (i.e. Google Maps™, Google Play Music™, Google Now™).

NOTE: Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

CAR SETUP

1. Press the SETUP button.
2. Touch the “Phone Projection” icon on the screen.
3. Select “On” for Android Auto.
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

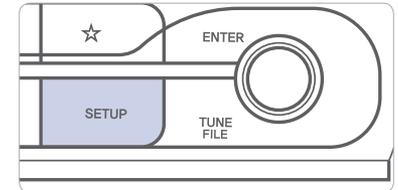

For more detailed information on how to operate Android Auto, please refer to your display audio or navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website

<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

APPLE CARPLAY™

REQUIREMENTS

- Apple Lightning® cable
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

PHONE SETUP

On your phone, go to Settings > General > CarPlay to allow CarPlay access.

On your phone, go to Settings > Siri and ensure Siri is turned ON.

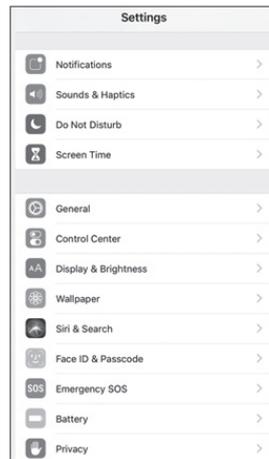

CAR SETUP

1. Press the SETUP button.
2. Touch the “Phone Projection” icon on the screen.
3. Touch “iOS” on the Connectivity Settings screen then touch “On” to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.



Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

CarPlay Home Screen



- | | |
|-------------------------|----------------------------------|
| 1 HOME ICON | 7 APPLE MAPS |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES |
| 3 CELLULAR SIGNAL | 9 3RD PARTY APPS |
| 4 PHONE TIME | 10 SCREEN PAGE INDICATOR |
| 5 PHONE | 11 EXIT TO HOME SCREEN |
| 6 APPLE MUSIC™ | 12 CURRENT CARPLAY AUDIO PLAYING |

SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon 1 on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION 13 button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > Siri).

3. Say any of the following commands;
 - “Text <John Smith> ‘Call you later’” to send a text message.
 - “Read text messages” to read available text message.
 - “Call <John Smith>” to make a phone call.
 - “Find <POI/Destination>” to locate a POI/Destination.

PHONE

Touch the PHONE 5 icon to access the Phone screen. Siri will automatically asks ‘Who do you want to call’ when the PHONE 5 icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

APPLE MUSIC

Touch the APPLE MUSIC 6 icon to access the Apple Music screen.

APPLE MAPS

Touch the APPLE MAPS 7 icon to access the Apple Map screen.

MESSAGES

Touch the MESSAGES 8 icon to access the Message screen. Siri will automatically asks ‘Want to hear unread messages or create a new one’ when the MESSAGE icon is selected.





3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.


TRANSMISSIONS

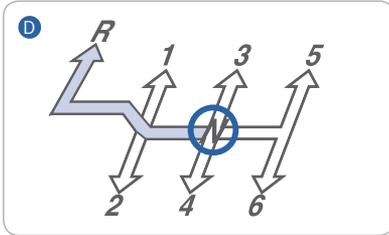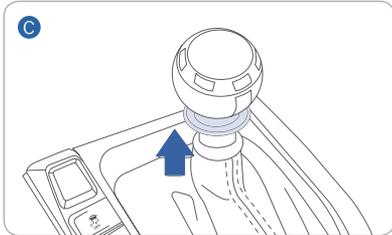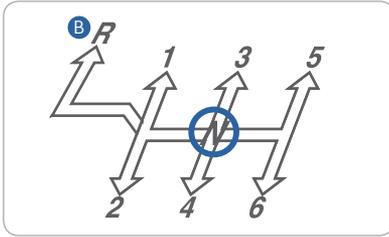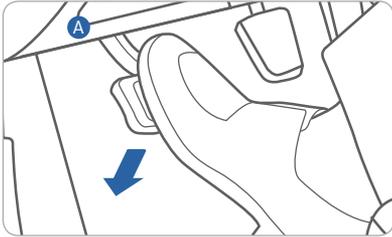

Shifting into Reverse

1. Fully depress the clutch **A**
2. Shift into Neutral **B**
3. Pull up on the reverse lockout collar below the shift knob **C**
4. Shift into Reverse **D**

CRUISE CONTROL

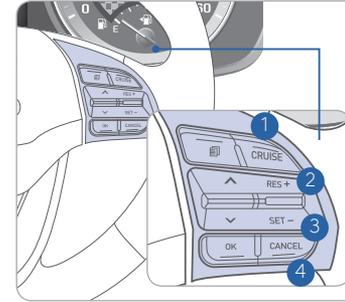

The Cruise Control system allows you to program the vehicle to maintain a constant speed without pressing the accelerator pedal.

- 1 Push CRUISE button to turn cruise control ON/OFF.
- 2 Push the toggle switch UP to resume or increase cruise control speed.
- 3 Push the toggle switch DOWN to set or decrease the cruise control speed.
- 4 Push CANCEL to cancel cruise control.

Setting Cruise Control

1. Press the "CRUISE" button **1** to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle "-SET" switch **3** DOWN to set cruising speed.

Adjusting the vehicle speed

1. Toggle "+RES" switch **2** UP to increase cruising speed.
2. Toggle "-SET" switch **3** DOWN to decrease cruising speed.


Note

Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 5 mph.


To Cancel Cruise Control

Press the "CANCEL" button **4** or depress the brake pedal.

REARVIEW CAMERA

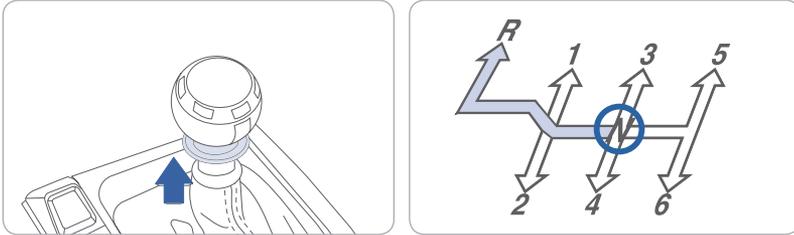

The rearview camera will activate when the ignition switch is ON and the shift lever is in the R (Reverse) position.

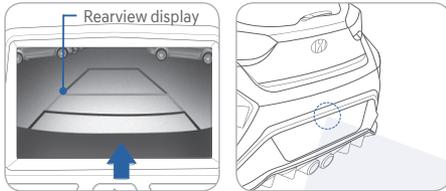

When the gear shift lever is shifted into reverse (R), the rearview camera displays the area behind the vehicle.

NOTE

The image displayed on the screen may become difficult to see under the following conditions:

- In the dark or at night.
- When it is raining, or when water droplets are on the camera.
- When the sun or the beam of headlights are shining into the camera lens.

Use care to keep the camera lens clean and avoid applying any type of solvents, car wax, or window cleaners to the camera lens.

If the lens becomes dirty, wipe the lens with a clean, soft cloth.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure Position Indicator and Tire Pressure Indicator (shown on the LCD display)

LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires are significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, have the system checked by an authorized HYUNDAI dealer as soon as possible.

LOW TIRE PRESSURE POSITION INDICATOR AND TIRE PRESSURE INDICATOR (LCD DISPLAY)


Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator (🚗) will illuminate and the LCD 📊 display will indicate tire(s) requiring air.

The Tire Specification and Pressure Label located on the driver's side center pillar gives the tire pressures recommended for your car.

NOTE

Environmental factors can affect the tire pressure. The two main environmental factors are ambient air temperature and elevation. Colder ambient air will reduce tire pressure, while hotter ambient air will increase tire pressure. High elevation may also increase tire pressure.

ELECTRONIC STABILITY CONTROL (ESC)

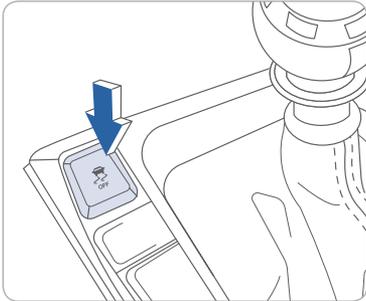

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

Press  to turn ESC on or off.

SHIFT LIGHT




The number of LEDs illuminated indicates the relevant engine speed. Different colored LEDs will be illuminated as engine speed nears the maximum allowed speed. When all 5 LEDs start blinking, it indicates the best time to initiate upshift operation.

You may select in which mode to display the gear shift indicator in the User Settings mode.

Go to 'User Settings → Convenience → Shift Lights → ECO/NORMAL/SPORT/N/CUSTOM'.

Each gear and drive mode has different LED operation range. In SPORT mode and N mode, LED operation is broader than NORMAL mode and ECO mode to further support the driver under sporty or track driving conditions.

REV MATCH

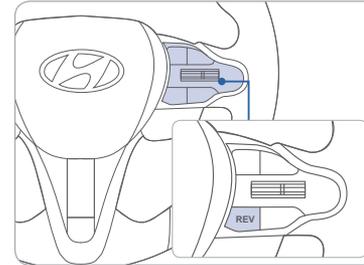


The Rev Matching system automatically helps synchronize engine rpm with the optimal speed of the gear about to be engaged which reduces the impact of clutch connection and improves gear shift response.


1. Press REV button (ON/OFF)

- Press the REV button to turn on the system. A message appears "Rev Matching On" with a REV indicator on the cluster LCD display.
- Press the REV button again to turn off the system. A message appears "Rev Matching Off" and the REV indicator disappears.

BLIND-SPOT COLLISION-AVOIDANCE ASSIST (BCA)

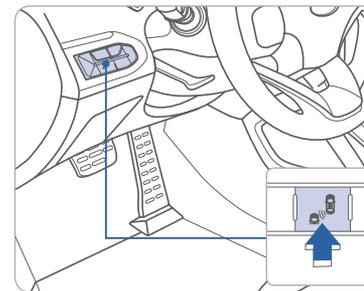

The Blind-Spot Collision-Avoidance Assist (BCA) system may apply braking power, when an approaching vehicle is detected within a certain distance next to or behind your vehicle. The instrument cluster will inform the driver of activation. Press the Blind-Spot switch. The indicator will illuminate on the button. If vehicle speed exceeds 40mph the system will activate. Press the switch again to deactivate the system.

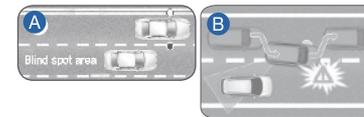

A Blind spot collision warning (BCW)

Warning range is dependent on your vehicle speed. Example, if your vehicle speed is 20 mph greater than other vehicles, the warning is not active.

B Blind spot collision avoidance (BCA)

When changing lanes, the system detects the front lane through the camera installed on the windshield and detects the side/rear areas through radar sensors.

