

VOICE RECOGNITION TIPS

BLUETOOTH®

Command **Example**
Dial <Phone #> — “Dial
7-1-4-0-0-0-8-8-8-8”

Call <Name> — “Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:

- Use full names instead of short or single-syllable names (“John or Dad”)
- Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

NAVIGATION

Command **Example**
Find Address — “1-2-3-4-5 1st Street,
<House #, Street, Fountain Valley”
City, State>

Find <POI Name> — “Find McDonald’s”

Located on Rearview Mirror

LOCAL SEARCH



Command **Example**
Find <POI Name> — “Find Lowe’s® near me”
<POI Name> — “Starbucks®”

DEMONSTRATE AUTOMATIC CLIMATE CONTROL - page 11

HOW TO DEFROST

- 1 Press the front defrost button.
- 2 Set to warmest temperature setting.
- 3 Set to highest fan speed.

TIRE PRESSURE MONITORING SYSTEM (TPMS)- page 20

Low tire pressure indicator /
TPMS malfunction indicator



NOTE: Tire pressure may vary in colder temperatures causing the low tire pressure indicator  to illuminate. Inflate tires according to the Tire Pressure Label located on the driver’s side door pillar.

INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT

SET FIRST SERVICE VALET APPOINTMENT

REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE

WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

MAINTENANCE

| Scheduled Maintenance (Normal Usage) | | 3.8L / 5.0L | | 3.3T |
|--|--|--|---------|--|
| Engine Oil And Filter | Replace | 7,500 or 12 mos. | Replace | 6,000 or 12 mos. |
| Fuel Additives | Add | 7,500 or 12 mos. | Add | 6,000 or 12 mos. |
| Tire Rotation | Perform | 7,500 or 12 mos. | Perform | 6,000 or 12 mos. |
| Vacuum Hose | | | | |
| Air Conditioning Refrigerant | | | | |
| Brake Hoses & Lines | | | | |
| Drive Shafts & Boots | | | | |
| Exhaust Pipe & Muffler | | | | |
| Front Brake Disc/Pads, Calipers | Inspect | 7,500 or 12 mos. | Inspect | 6,000 or 12 mos. |
| Rear Brake Disc/Pads | | | | |
| Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint | | | | |
| Suspension Mounting Bolts | | | | |
| Propeller Shaft | | | | |
| Air Cleaner Filer | Inspect | 7,500 or 12 mos. | Inspect | 6,000 or 12 mos. |
| | Replace | 22,500 or 36 mos. | Replace | 18,000 or 36 mos. |
| Climate Control Air Filter (For Evaporator And Blower Unit) | Replace | 15,000 or 12 mos | Inspect | 12,000 or 12 mos. |
| Fuel Tank Air Filter | | | | |
| Vapor Hose & Fuel Filler Cap, Fuel tank | | | | |
| Brake Fluid | Inspect | 15,000 or 24 mos. | | 12,000 or 24 mos. |
| Parking Brake | | | | |
| Fuel Filter | | | | |
| Fuel Lines, Fuel Hoses And Connections | Inspect | 30,000 or 48 mos. | Inspect | 24,000 or 48 mos. |
| Front(AWD)/Rear Differential Oil | | | | |
| Valve Clearance (3.3T and 3.8L) | Inspect | 60,000 or 72 mos. | Inspect | 60,000 or 72 mos. |
| Drive Belt | Inspect | First 60,000 or 72 mos. Subsequent, every 15,000 or 24 mos. | Inspect | First 60,000 or 72 mos. Subsequent, every 12,000 or 24 mos. |
| Spark Plugs (Iridium Coated) | Replace | 105,000 | Replace | 42,000 |
| Coolant | Replace | First 120,000 or 120 mos. Subsequent, every 30,000 or 24 mos. | Replace | First 120,000 or 120 mos. Subsequent, every 30,000 or 24 mos. |
| Automatic Transmission Fluid | No checks or services required for Normal Usage driving. | | | |

*Check the engine oil regularly between recommended oil change. Genesis Branded Vehicle recommend Quaker State oil.

*See Owner’s Manual for details.

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle’s Owner’s Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle’s Owner’s Manual or contact your authorized retailer of Genesis Branded Products. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Genesis Brand reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

NP150-G2019
(Rev 06/05/18)
Printing 06/08/18

Sales Consultant Date Sales Manager Date

Customer Date

Email @

GENESIS G80

QUICK REFERENCE GUIDE



GENESIS

GENESIS BRANDED VEHICLE OWNER PRIVACY POLICY

Your Genesis Branded Vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. We have created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the GenesisMotorsUSA.com website at <http://www.genesismotorsusa.com/privacy-policy.html>
If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact Customer Care at:

Genesis Customer Care
P.O. Box 20850
Fountain Valley, CA 92728
844-340-9741
CustomerCare@genesismotorsusa.com

Genesis Customer Care representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English).
For Customer Care assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.


Roadside Assistance: **1-844-340-9742**
SiriusXM® Radio: **1-800-967-2346**
Genesis Customer Care &
Connected Services: **1-844-340-9741**
www.MyGenesisusa.com




Driver position
memory system
Page 03



Instrument
cluster
Page 07

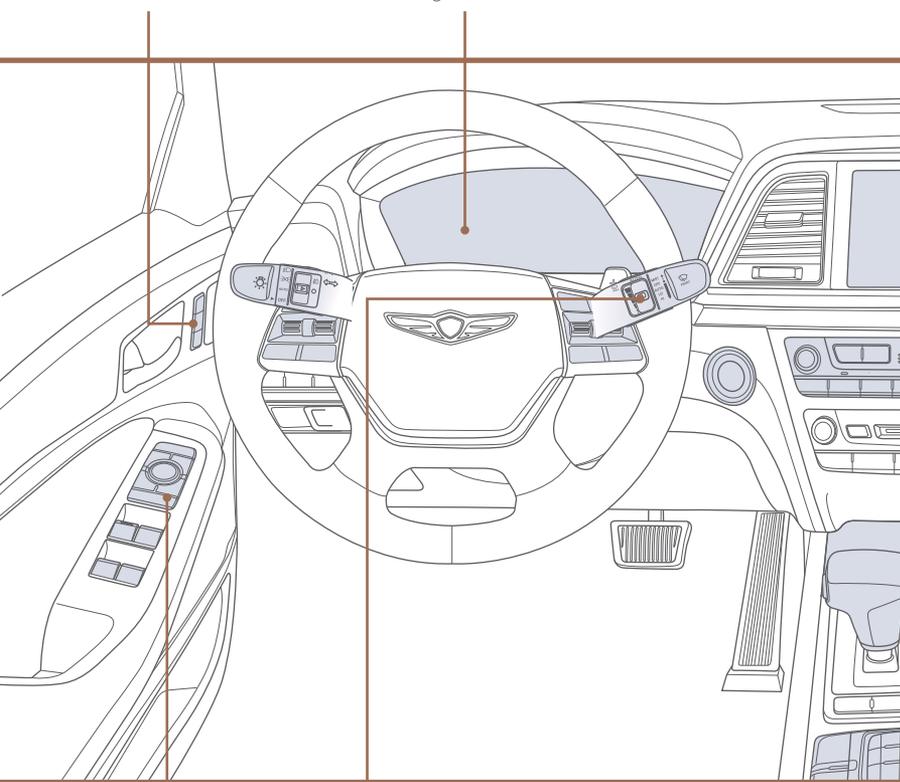

Driver's main
controls
Page 05

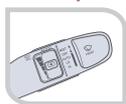


Wiper and
washer
Page 06

WARNING!


To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.



Navigation
Page 13

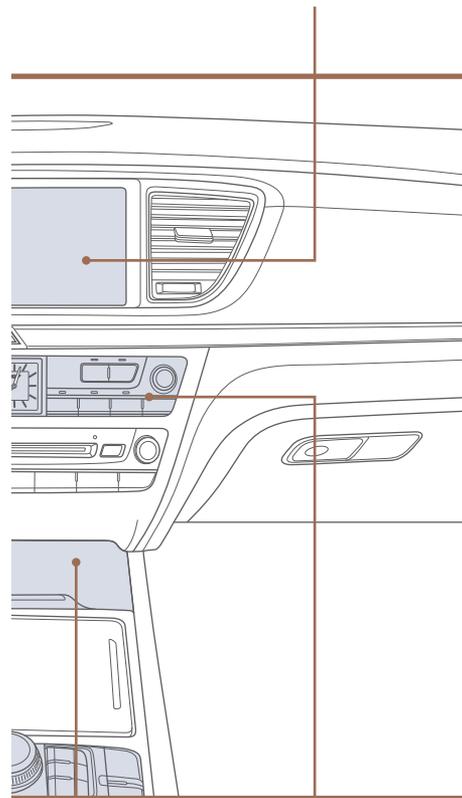

AUX and
USB port
Page 14

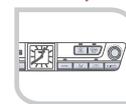

Climate
controls
Page 11

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Vehicle. More detailed information about these features are available in your Owner's Manual.

FEATURES AND CONTROLS

| | |
|---|----|
| Climate control system | 11 |
| Driver's main controls | 05 |
| Head-up display | 10 |
| Instrument cluster | 07 |
| LCD display control/modes | 09 |
| Panoramic Sunroof | 05 |
| Seat-Climate control system seat | 04 |
| Seat-Driver position memory system | 03 |
| Seat-Front seat adjustment | 02 |
| Seat-Headrest adjustment | 03 |
| Seat-Seat warmer & cooler | 04 |
| Smart key | 01 |
| Wipers and washer | 06 |
| MULTIMEDIA | |
| Aux and USB port | 14 |
| Navigation | 13 |
| Wireless cellular phone charging system | 14 |

DRIVING

| | |
|--|----|
| Blind-Spot Collision Warning (BSW) | 18 |
| Driver Attention Warning (DAW) | 15 |
| Forward Collision-Avoidance Assist (FCA) | 19 |
| Lane Keeping Assist (LKA) | 16 |
| Shift by Wire (Electronic type shifter) | 15 |
| Smart Cruise Control | 17 |
| Tire Pressure Monitoring System (TPMS) | 20 |

*Some vehicles may not be equipped with all the listed features.


This QRG provides instructional videos that are accessible by scanning the QR Codes found throughout the QRG with your smartphone/tablet.

In order to scan a QR Code, you will need to use a QR Code Reader App on your mobile device. You can download the app onto your device through an app store or marketplace.

SMART KEY




-  Lock
-  Unlock
-  Trunk open
-  Panic

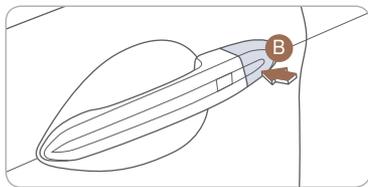

Driver's side door Lock / Unlock

Smart key must be within 20-40 in. from the outside door handle.

- Press:** Once – Unlock driver door
 Twice – Unlock all doors
 Third – Lock all doors

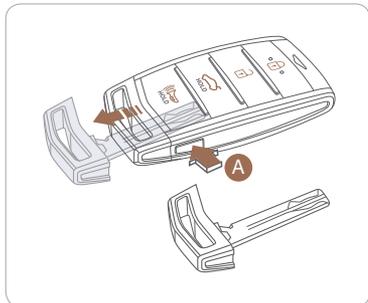


Remove mechanical key.

Press and hold the release button **A** to remove the mechanical key.

NOTE: The key hole is located under the key hole cover **B**.

FRONT SEAT ADJUSTMENT

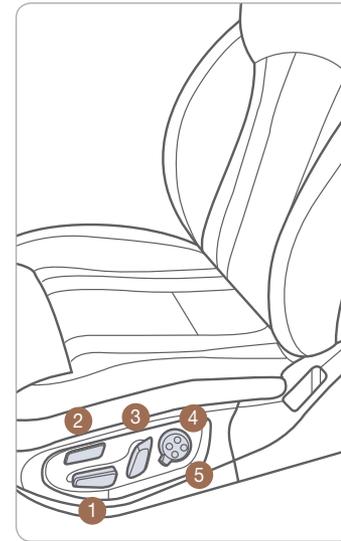

Forward and backward **1**



Seat cushion length (for driver's seat) **2**




Seatback angle **3**



Seat cushion height **1**




Lumbar support **4**

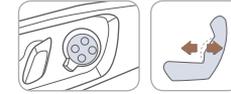

Seat bolster adjustment (for driver's seat) **5**



HEADREST ADJUSTMENT

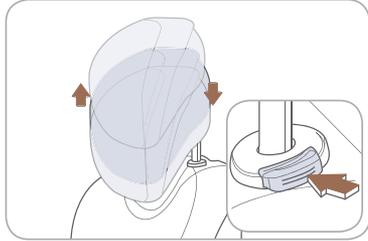


To Raise Headrest:
Pull headrest up.

To Lower Headrest:
Press lock button while pressing down on headrest.

To adjust headrest forward:
Pull forward to 1 of 3 positions.

To adjust backward:
Pull it fully forward to the farthest position and release it.

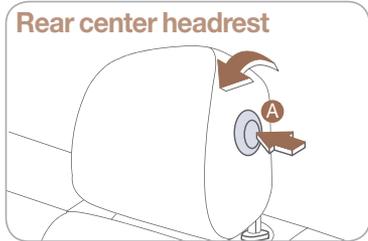


Rear center headrest

To Raise Center Headrest:
Rotate headrest forward.
Lift headrest up.

To Lower Center Headrest:
Press lock button while pressing down on headrest.

Press button **A** to rotate headrest down.

DRIVER POSITION MEMORY SYSTEM

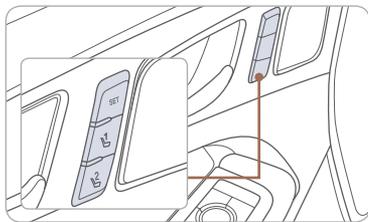

To Store Settings

1. Adjust the driver's seat, outside rearview mirrors, steering wheel, instrument panel illumination and head up display.
2. Press the SET button. The system will beep once.
3. Press one of the memory buttons (1 or 2) within 5 seconds. The system will beep twice.


NOTE: Transmission must be in P (Park).

To Recall


Press the desired memory button (1 or 2). The system will beep once.

NOTE: To reset the system, please refer to the Owner's Manual.

SEAT WARMER (front seats)

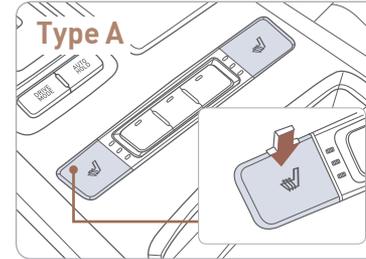


Type A

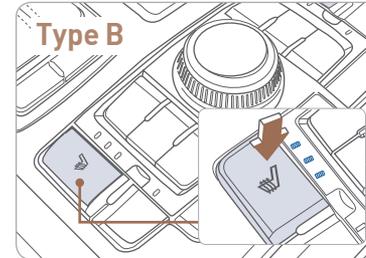


Type B

Each time you push the button, the setting is changed as follows:

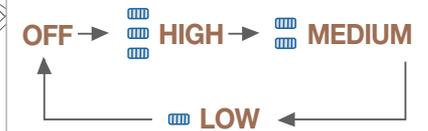


To turn off immediately, press and hold the button.

SEAT WARMER/COOLER (front seats)

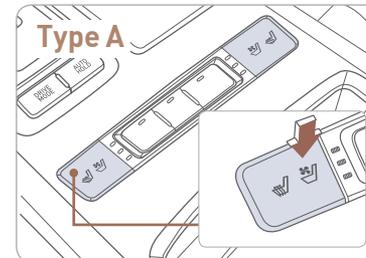


Type A

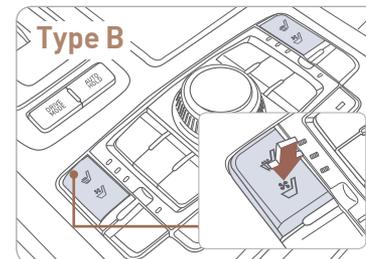

Type B


- Heat
- Air Ventilation

Each time you push the button, the setting is changed as follows:

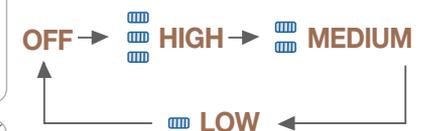

To turn off immediately, press and hold the button.


DRIVER'S MAIN CONTROLS

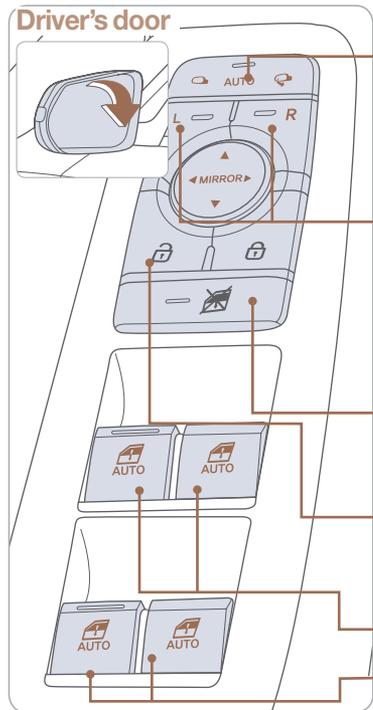

Driver's door

- Outside Rearview Mirror**
 - Press switch left/right to unfold/fold mirrors. Press the lock or unlock button on the smart key, and the mirrors will be folded or unfolded when AUTO is set.
 - Press the L or R button to adjust the mirror by using the directional switch. If L or R button is still selected, both mirrors will tilt downward when reversing. Deselect L or R will disable the auto tilt down feature.
- Power window lock button**
 - Disables the power window switches on the rear passenger doors.
- Door Lock**
 - Locks/unlocks all doors.
- Window Switches**
 - Front power window switches.
 - Rear power window switches.

PANORAMIC SUNROOF

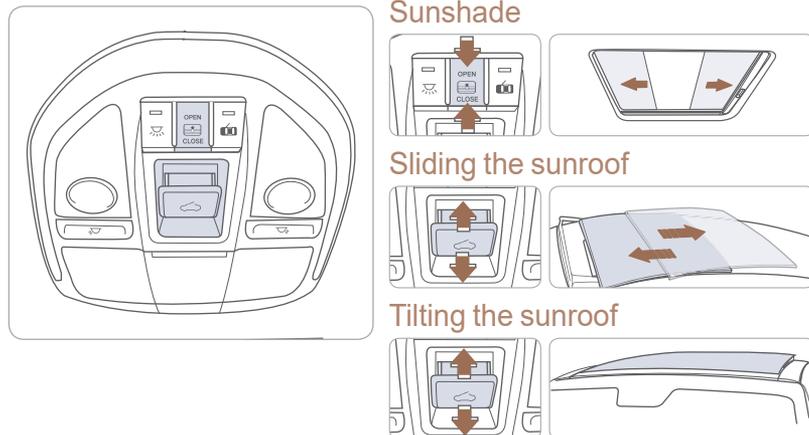


Sunshade


Sliding the sunroof

Tilting the sunroof

WIPERS AND WASHER

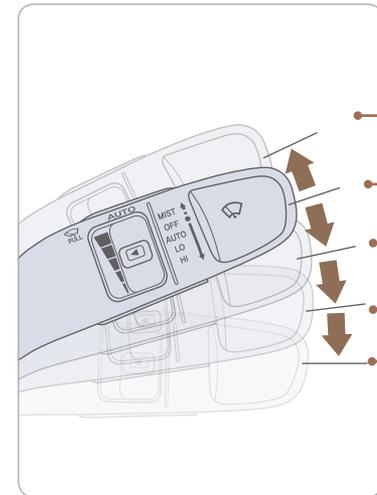


- MIST** - Single wipe
- OFF**
- AUTO** - Auto control wipe
- LO** - Low wiper speed
- HI** - High wiper speed

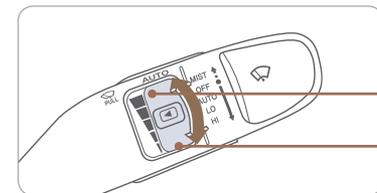Auto Control Wipe Interval Adjustment
Adjust the control knob.

- Fastest wiper speed
- Slowest wiper speed

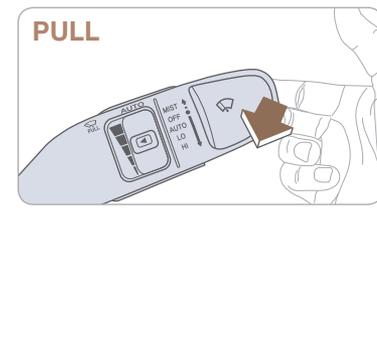



PULL

Windshield Washer
Pull the lever gently toward you to spray washer fluid onto the windshield and to run the wipers 1-3 cycles.


Headlamp Washer
Fluid will spray on headlamp assemblies when headlamps are turned ON. Will activate only once for every ignition key cycle or only once every 15 minutes.

INSTRUMENT CLUSTER

Type A with 4.3" LCD Display

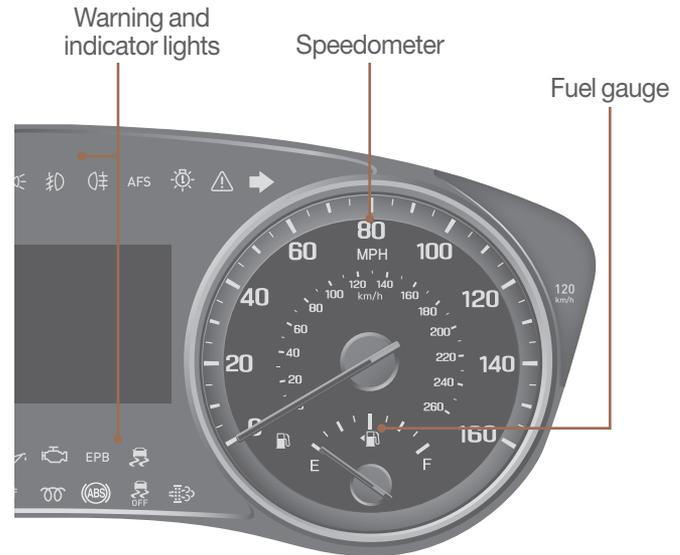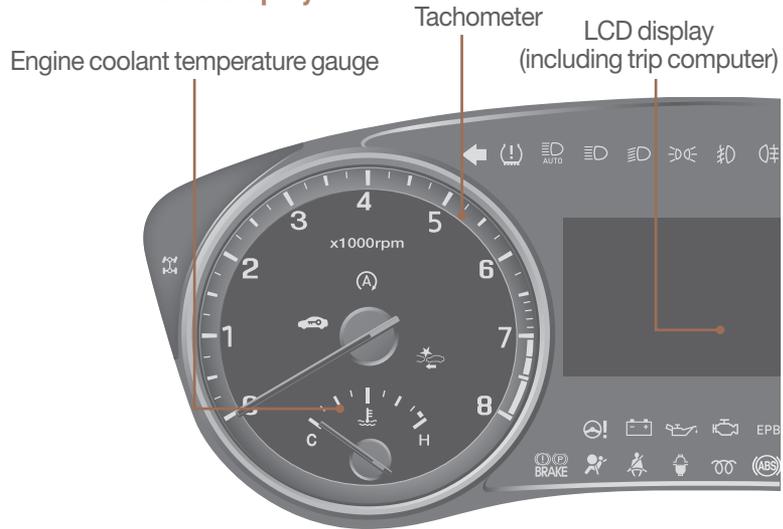


Type B with 7" LCD Display

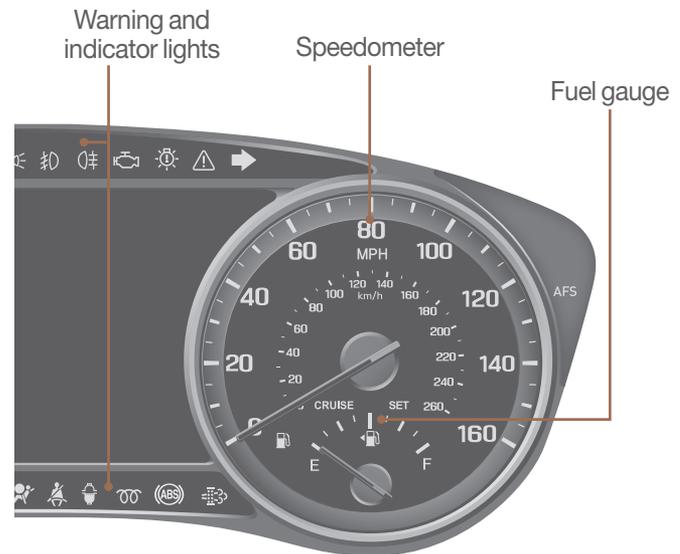


LCD DISPLAY MODES

| Modes | Symbol | Explanation |
|----------------------------------|--------|---|
| Trip Computer | | This mode displays driving information like the tripmeter, fuel economy, and so on. |
| Turn By Turn (TBT) (if equipped) | | This mode displays the navigation turn by turn guidance. |
| Assist (if equipped) | | This mode displays the state of the Driver Attention Warning (DAW) system and Tire Pressure Monitoring System (TPMS). |
| Warning | | Display service internal warning messages and tire pressures. |
| User Settings | | Changes settings. |

LCD DISPLAY CONTROL

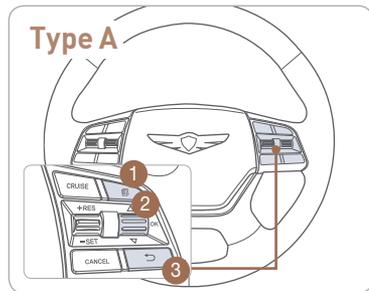


- 1 : MODE button for changing modes
- 2 : MOVE switch for changing items
- OK (Press) : SELECT/RESET button for setting or resetting the selected item
- 3 : BACK button for moving to upper level menu (if equipped)

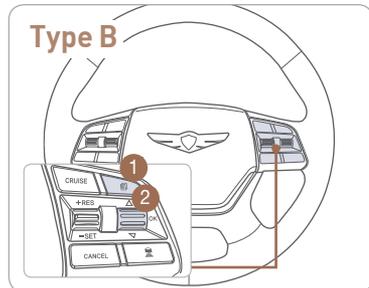

WARNINGS AND INDICATORS

| | | |
|---|--|--|
| Air bag warning light | Seat belt warning | Parking brake & Brake fluid warning light |
| Anti-lock Brake System (ABS) warning light | Electronic Brake Force Distribution (EBD) system warning light | |
| Electric Power Steering (EPS) warning light | Malfunction Indicator Lamp (MIL) | Charging system warning light |
| Engine coolant temperature warning light | Engine oil pressure warning light | Low fuel level warning light |
| Low tire pressure warning light | Door open warning light | Trunk open warning light |
| AWD warning light | Electric Parking Brake (EPB) warning light | Forward Collision Avoidance (FCA) |
| Master warning light | Electronic Stability Control (ESC) indicator | Electronic Stability Control (ESC) OFF indicator |
| Immobilizer indicator | Turn signal indicator | Low beam indicator |
| High beam indicator | Light ON indicator | Smart high beam indicator |
| Front fog light indicator | Cruise indicator | Adaptive Front Lighting System |
| AUTO HOLD indicator | SPORT mode indicator | SNOW mode indicator |
| ECO indicator | Lane Keeping Assist (LKA) | |

HEAD-UP DISPLAY

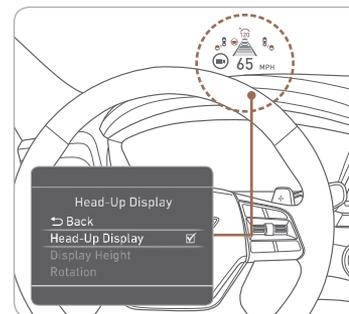

The Head-Up display is a transparent display which projects an image of selected information of the instrument cluster and navigation onto the windshield glass.


To activate the head up display, select Head-Up Display in the User Settings Mode in the LCD display. Adjust Head-Up Display height until in view.

NOTE: See Owner's Manual for more details on selecting content to display on the Head Up Display.


CLIMATE CONTROL SYSTEM

Front

Type A

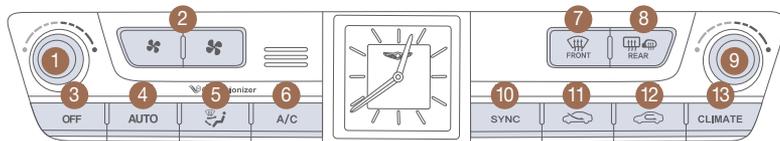


Type B

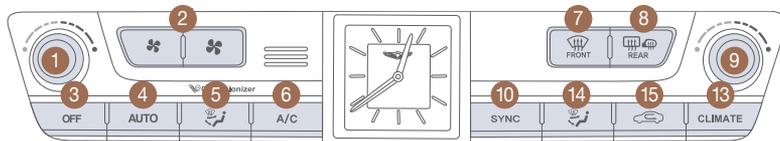


- 1 Driver's temperature control knob
- 2 Fan speed control button
- 3 OFF button
- 4 AUTO (automatic control) button
- 5 Driver's Mode selection button
- 6 Air conditioning ON/OFF button
- 7 Front windshield defrost button
- 8 Rear window defrost button
- 9 Passenger's temperature control knob

DEFOGGING/DEFROSTING

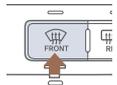


1. Press the front defrost button.

NOTE: Outside (fresh) air position will be selected when front defrost button is selected.

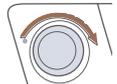

2. Select warmest temperature.

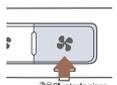

3. Set the fan speed to the highest speed setting.


NOTE: To reduce window fogging and improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. "In addition, position the air intake control to circulate fresh air whenever possible while operating the vehicle.

SYSTEM OFF

Pressing the OFF button will place the system in the OFF mode.


- Front blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

Rear

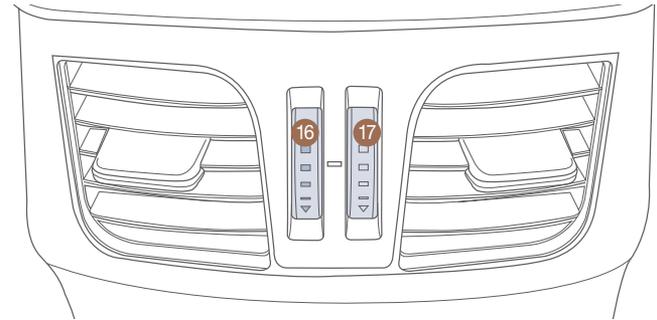


- 10 SYNC button (sync driver and passenger front air temperature)
- 11 Air intake control button (Outside air)
- 12 Air intake control button (Recirculated air)
- 13 Climate information screen selection button
- 14 Mode selection button (Passenger)
- 15 Air intake control button
- 16 Rear temperature control thumbwheel
- 17 Rear vent ON/OFF thumbwheel

MODE SELECTION

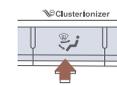

Changing the direction of the air flow as follow.

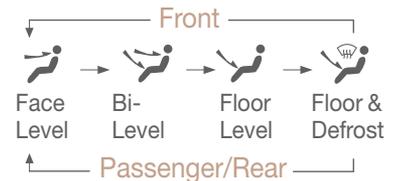

AIR INTAKE CONTROL



Recirculated air position



Outside (fresh) air position (type A)



Outside (fresh) air position (type B) (light off)

AUTOMATIC HEATING / AIR CONDITIONING



Automatically controls the modes, fan speeds, air intake and air-conditioning functions.

SMART VENT

When cabin humidity and carbon dioxide levels increase while Climate Control is off, fresh air will be circulated into the cabin.

Please refer to the Owner's Manual for more information.

NAVIGATION

Map position

Standard AVN



- 1 Move to the Home Screen
- 2 Change the map view mode
- 3 Navigation Voice Guidance On/Off
- 4 Zoom in the map
- 5 Map scale display
- 6 Zoom out the map
- 7 [MENU] button
- 8 Unified Search
- 9 Touch to scroll the map
- 10 Set a waypoint to the current route
- 11 Save frequently used address to address book
- 12 Find a POI (Point Of Interest) around the current position
- 13 Vehicle position

North Up/Heading Up.


- Displays the current map mode to reflect the position in reference to the screen. The map mode can be switched between North Up and Heading Up.
- Each time the button is pressed, the screen will switch in the order shown below.
 - Heading Up ➡ North Up ➡ Heading Up ➡
 - Map Scale: Increases or decreases the map size.
 - Map Scale indicator: shows the scale of the map.
 - Map Voice Key: Activate/deactivate the voice guidance.

DIS Navigation system




- 1 Clock display
- 2 Move to the Home Screen
- 3 Change the map view mode
- 4 Navigation voice guidance on/off
- 5 Zoom in the map
- 6 Map scale display
- 7 Zoom out the map
- 8 [MENU] button
- 9 Route guidance
- 10 Vehicle position
- 11 Current position and Destination
- 12 Remaining distance display/ Remaining time
- 13 Cancel Route
- 14 [Route] button

AUX and USB PORT

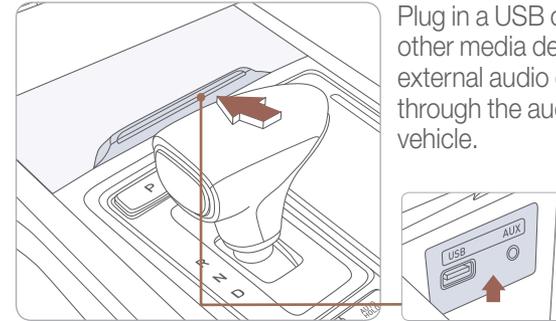

Plug in a USB cable, Auxiliary cable, or other media device to connect an external audio device and listen to it through the audio system in your vehicle.


WIRELESS CELLULAR PHONE CHARGING SYSTEM

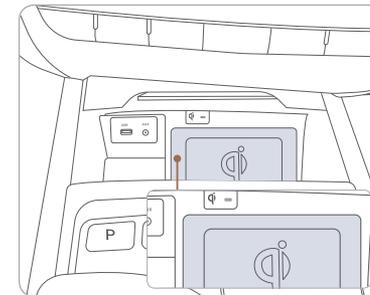


The system operates when all doors are closed, and the Engine Start/ Stop button is in the ACC/ON position. When the charging process is completed, the indicator light changes from green to orange. If there is a malfunction, the indicator light turns orange and blinks for 10 seconds. In this case, remove the phone from the charging pad and then placing it back onto the pad. The wireless charging function can be turned ON or OFF.

NOTE: The wireless cellular phone charging system supports only the Qi-enabled cellular phones (☎).

SHIFT BY WIRE (Electronic type shifter)

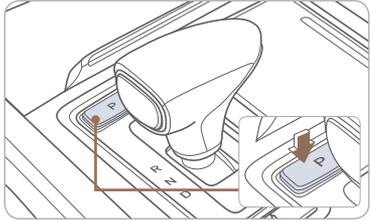


P (Park)
Always stop completely before shifting into P (Park). To shift the gear from R (Rear), N (Neutral), D (Drive) or Manual mode to P (Park), press the [P] button while depressing the brake pedal.

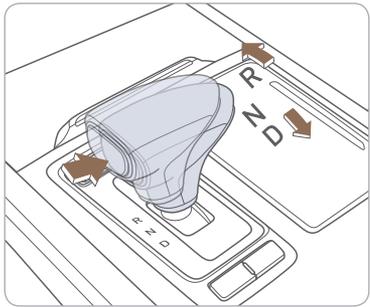

R (Reverse) / N (Neutral) / D (Drive)
To select gear, press the [UNLOCK] button while depressing the brake pedal and then move the shift lever forward (R side) or backward (D side).

DRIVER ATTENTION WARNING (DAW)

The Driver Attention Alert (DAA) system displays the condition of the driver's fatigue and inattention.

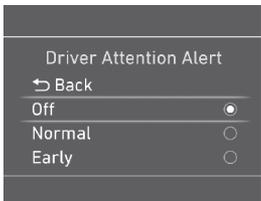

- Adjust the Driver Attention Alert settings.
 - To adjust the Driver Attention Alert settings, go to User Settings > Driving Assist > Driver Attention Alert > Normal or Early in the instrument cluster.


OFF - Driver Attention Alert system is deactivated.

NORMAL - Driver Attention Alert system alerts the driver of his/her fatigue level or inattentive driving practices.

EARLY - Driver Attention Alert system alerts the driver of his/her fatigue level or inattentive driving practices faster than Normal mode.

The Driver Attention Alert system is operable, when driving speed is between 40 mph and 110 mph .

LANE KEEPING ASSIST (LKA)

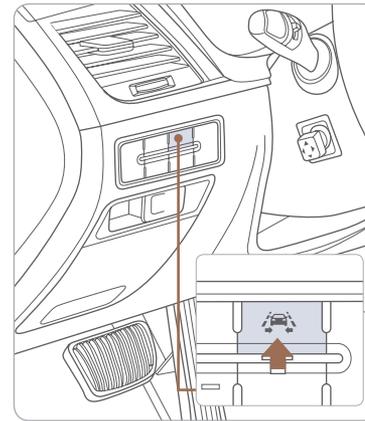

The Lane Keeping Assist (LKA) system helps detects lane markers on the road, and assists the driver's steering to help keep the vehicle between lanes.

- To turn LKA on, press the LKA switch.
- To turn LKA off, press the switch again.


LKA operates only when the vehicle speed is above 38 mph and when the LKA icon in the instrument cluster is green. LKA will not operate properly if the following conditions are present:

- the lane line is not clear
- on sharp bend in a road
- heavy fog

NOTE: LKA Settings can be adjusted in the User Settings page of the instrument cluster under Driving Assist.

Refer to the Owner's Manual for more detailed information.

SMART CRUISE CONTROL

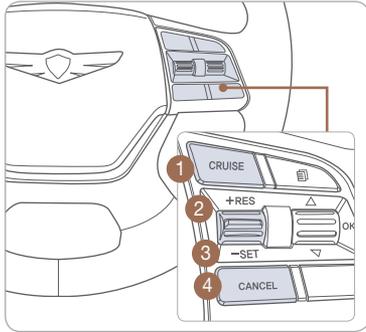

The cruise control system allows you to program the vehicle to maintain a constant speed without holding the accelerator pedal.

- 1 To turn On/Off cruise control.
- 2 Toggle switch UP to Resume or Increase the cruise control speed.
- 3 Toggle switch DOWN to Set or Decrease the cruise control speed.
- 4 To Cancel the Cruise Control.

Setting Cruise Control

1. Press the “CRUISE” button 1 to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle “-SET” switch 3 DOWN to set cruising speed.


Adjusting the vehicle speed

1. Toggle “+RES” switch 2 UP to increase cruising speed.
2. Toggle “-SET” switch 3 DOWN to decrease cruising speed.

NOTE: Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 5 mph.

To Cancel Cruise Control

Press the “CANCEL” button 4 or depress the brake pedal.

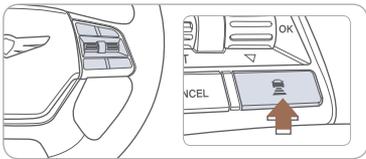

Setting Vehicle Distance

This system assists you in setting the distance from the vehicle ahead and will maintain the selected distance without depressing the accelerator or the brake pedal.

The vehicle to vehicle distance will automatically activate when you set the cruise speed.



Each time the vehicle distance set button is pressed, the vehicle to vehicle distance changes as follows:




BLIND-SPOT COLLISION WARNING (BSW)



The Blind-Spot Collision Warning (BSW) uses a radar sensor when in Reverse gear to alert the driver of oncoming vehicle(s).



Scan to view a video of: Blind-Spot Collision Warning (BSW)

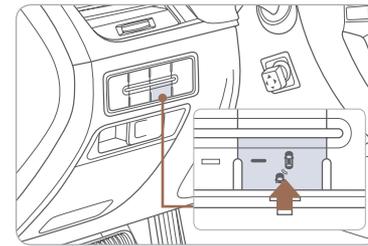

- 1 Blind spot detection
- 2 Lane change assist
- 3 Rear cross traffic alert

- To turn BSW on, press the BSW button. (indicator illuminated)
- To turn BSW off, press the BSW button again.

The BSW system will activate once the vehicle speed exceeds 20 mph. The rear cross traffic alert will activate once the vehicle is in reverse at speeds below 6 mph and BSW is activated.

FORWARD COLLISION-AVOIDANCE ASSIST (FCA)

Forward Collision...

↩ Back

Late

Normal

Early

The Forward Collision-Avoidance Assist (FCA) system is designed to help detect and monitor the vehicle ahead or detect a pedestrian in the roadway and warn the driver if a collision is imminent.

To operate the system, select the FCA (Forward Collision Avoidance Assist) sub menu in the LCD cluster display under User Settings. Please refer to your Owner's Manual for further information.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure Position Telltale and Tire Pressure Telltale (Shown on the LCD display)

NOTE: Vehicle must be driven for accurate tire pressure reading.

LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires is significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust tire pressure to specification. If the lamp remains illuminated, have the system checked by authorized retailer of Genesis Branded Products as soon as possible.

Program Coverage Summary

| Genesis Service Valet is included for the first 3 years or 36,000 miles, whichever comes first, of ownership. | | | |
|---|---------------|------------------------------|-------------|
| Complimentary Services | Service Valet | Complimentary Loaner Vehicle | Maintenance |
| Original Owner or Lessee | Yes | Yes | Yes |
| Subsequent Owner or Lessee | Warranty Only | Warranty Only | No |

See below for program terms and conditions.

SERVICE VALET

Service Valet is available while your vehicle is receiving complimentary maintenance, wear items, or warranty repairs by an authorized Genesis retailer. Simply contact your authorized Genesis retailer's Service Experience Manager or contact the Customer Care Center at 844-340-9741 to make your appointment. The retailer will work with you to arrange your pickup and delivery time and location.

- Valet appointments must be made at least 2 business days in advance.
- Valet area of coverage is valid only within an estimated 1 hour drive time distance (based on traffic, weather, and road conditions) from the participating retailer location to the pickup/delivery location.
- Valet pickup and delivery must occur during normal business hours. After-hours pickup and delivery are at the discretion of your participating retailer.
- You must notify your Genesis Service Experience Manager 1 business day in advance if location or time of valet services changes. If a change or cancellation is not made at least 1 business day in advance, you may be charged a fee, or Service Valet may be cancelled.
- You will be charged a fee if you elect to extend the use of the courtesy replacement vehicle or delay the delivery of your vehicle.
- Prior to or at the time of your vehicle pickup, you will need to provide your valet with the following information if a courtesy replacement vehicle is needed:
 - Insurance company name, policy number, and expiration date
 - Driver's license number, state, expiration, and date of birth
 - Credit card number and expiration date (standard requirement for rental car use)
 - The above information for any additional drivers

Genesis brand vehicle owner must provide the valet with the Genesis brand vehicle that is currently registered in compliance with local and state laws. Road tolls incurred during the Service Valet may be charged to the vehicle owner.

COMPLIMENTARY LOANER VEHICLE

We come to you and provide you with alternative transportation. While your vehicle is being serviced under this program, qualified drivers will be provided a courtesy replacement Genesis brand vehicle at no additional cost. You must be at least 25 years of age (in most states) with a valid driver's license to drive a loaner vehicle. Please provide your Service Advocate with the following information:

- Insurance company name, policy number, and expiration date
- Driver's license number, state, expiration and birth date
- Credit card number and expiration date (standard requirement for rental car use)
- The above information for any additional drivers

COMPLIMENTARY MAINTENANCE COVERAGE

Vehicle Eligibility

For original retail owners of the Genesis vehicle, all factory-recommended scheduled maintenance are covered for the first 3 years or 36,000 miles, whichever comes first. The Service Valet Program is applicable to all 2017 - 2019 model year Genesis brand vehicle United States specification vehicles purchased in the United States from authorized Genesis retailers. The program is not in effect outside of the United States.

- Vehicle coverage begins on the date of first retail sale. Fleet vehicles are excluded from this program.
- If the vehicle becomes damaged (such as by accident, fire, act of nature, etc.) and is subsequently titled salvaged, flooded, or reconstructed, it is no longer eligible for the benefits of the Genesis G80 complimentary maintenance Program.

Guidelines for Scheduling Maintenance

The Service Valet Program covers factory-recommended scheduled maintenance for the first 3 years or 36,000 miles, whichever comes first. Covered maintenance costs include all labor and parts necessary to complete the factory recommended service. Having your vehicle serviced at the specified time/mile intervals is critical in maintaining long-term durability. Failure to have your vehicle serviced at the specified interval may invalidate the warranty under certain circumstances.

If for any reason a service is missed, the authorized Genesis retailer will perform the next or missed major service.

Some owners may wish to have their oil changed more frequently. The customer must pay for any additional services performed on the vehicle. Service procedures not specifically referenced in the Genesis Customer Care Quick Reference Guide must be preauthorized by a Genesis District Parts and Service Manager.

